

BEDIENUNGSANWEISUNG

 
mit Montageanweisungen

Instrucciones de Uso y de Montaje

Instructions for use and installation

Instructions d'utilisation e avis de montage

Instruções de utilização e instalação

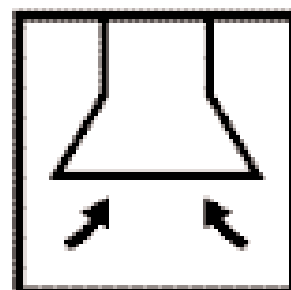

KD 9570 OBC

KD 9570 OJ

(Rev. 0)

Küppersbusch

ALLERFEINSTE KÜCHENTECHNIK

Dear client

Congratulations on your choice. We are sure that this modern, functional and practical appliance, made with top quality materials, will fully satisfy your needs.


Please read every section of this INSTRUCTIONS MANUAL before using your kitchen hood for the first time, to ensure maximum performance from the appliance and to avoid breakdowns, which may be caused by incorrect use, as well as to allow any minor problems to be solved.

Store this manual, as it will provide useful information about your kitchen hood at all times and will also help other people to use it.

Safety Instructions

- Please be aware of current local regulations with reference to domestic electrical fittings and gas education.
- Verify that the tension and frequency of the network match those indicated on the label located inside the kitchen hood.
- If the supply cable is damaged it should be replaced by the manufacturer, the after-sales service or a suitably qualified person in order to avoid hazard.
- Once the kitchen hood has been installed, ensure that the mains cable to the network is not in contact with any live metal edges.
- Avoid connecting the appliance to conductors used as exits for fumes produced by a non-electric energy source, e.g.: boilers, chimneys, etc.
- If the extractor fan is going to be used simultaneously with equipment powered by a non-electric energy source, e.g.: gas cookers, then the room must have sufficient ventilation.
- Excessive fat accumulation in the kitchen hood and metal filters is a fire risk and may also cause dripping, therefore the inside of the kitchen hood and the metal filters must be cleaned at least once a month.
- The lower part of the kitchen hood must be fitted at least 65cm. over gas or mixed hobs. FOLLOW THE HOB'S MANUFACTURER'S MINIMUM RECOMMENDATIONS.
- Never leave gas hobs lit if not covered by a

container. The fat accumulated in the filters may drip or catch fire when the temperature increases.


- Avoid cooking under the kitchen hood if the metal filters are not fitted, e.g.: while they are being cleaned in the dishwasher.
- You must not produce flames under the kitchen hood.
- Do not place anything on top of the cooker hood.
- Disconnect the appliance before any interior manipulation, e.g. during cleaning or maintenance.
- We recommend the use of gloves and to be extremely careful when cleaning the kitchen hood's interior.
- Your kitchen hood is designed for domestic use and only for extraction and purification of fumes produced during food preparation. It will be your responsibility if it is used for other purposes, which may be dangerous. The manufacturer cannot accept responsibility for damage caused by improper use of the appliance.
- For repairs please contact the nearest **KÜPPERSBUSCH** Technical Assistance Service, and always use genuine spare parts. Repairs or modifications carried out by unqualified personnel can cause malfunctions or may damage the appliance, putting your safety in danger.
- This appliance is marked according to the European directive 2002/96/EC on "Waste Electrical and Electronic Equipment" (WEEE). This guideline is the frame of a European-wide validity of return and recycling on Waste Electrical and Electronic Equipment, .
- This device is not meant to be used by persons (including children) whose physical, sensory or mental capacities are reduced, or who lack experience/knowledge, except if they have supervision or received instructions for using the device by the person responsible for his/her safety. Keep children away from the device and never let them play with it.

Index

	Page
Description of the appliance	11
Instructions for use	11
Cleaning and maintenance	12
Problem solving	12
Sizes and specifications	12
Accessories supplied	13
Installation	13
Active charcoal filters	13


Description of the appliance

 - A** An electronic programmer device with TOUCH CONTROL technology to control speed, light, programming and power indicators in use as well as filter saturation.
- B** Metal filters.
- C** Light.

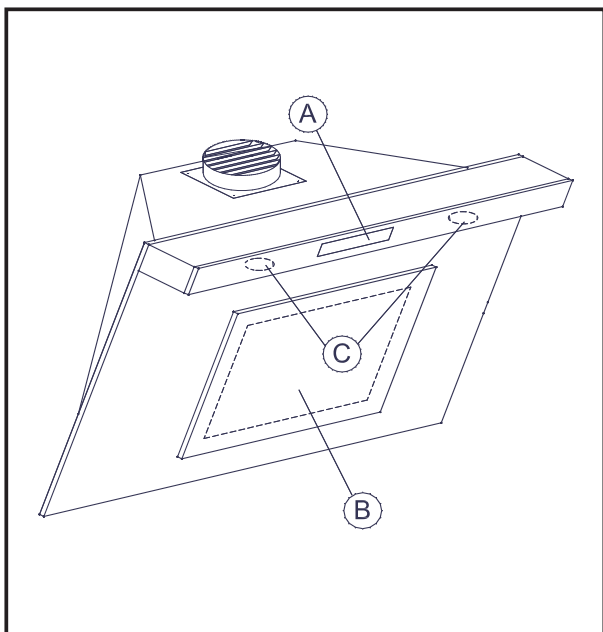

Instructions for use

 You can activate or deactivate the cooker hood by operating the functions shown in the diagram.

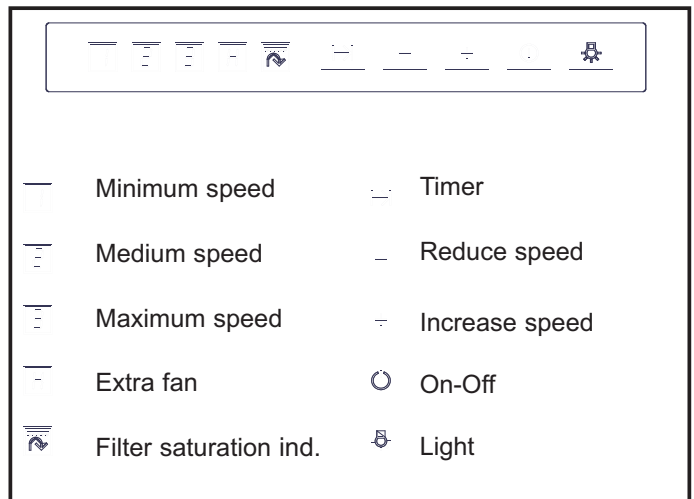

Switch on the extractor fan a few minutes before you start to cook in order to ensure that a steady air flow has been established before fumes appear. Allow the extractor fan to run for several minutes after you have finished cooking (between 3 to 5 minutes) in order to expel all the grease from the outlet duct. This prevents the return of grease, smoke and smells.

Programming the timer

Proceed as follows:

- 1) Turn the kitchen hood on and choose the required speed.
- 2) Press "timer". Speed indicators 1, 2 and 3 will start to flash.
- 3) Choose the required time by pressing " + + + " or " - - - ". There is a 10-minute interval between each stage. Level 1 (minimum): 10 minutes; level 3 (maximum): 30 minutes.
- 4) After having selected the working time, press "timer" again to save the setting. The indicator of the selected speed will start to flash.
- 5) The kitchen hood will switch itself off after the specified time.

The maximum speed 'H' can only be selected manually and will be automatically changed to the second speed level after approximately 10 minutes.

Filter saturation indicator "F"

Clean the filters when the filter saturation indicator lights up. (See page 12, filter cleaning). After cleaning the filters, and with the hood turned off, simultaneously press " + + + " and " - - - " for 3 seconds to switch off the indicator.

Cleaning and maintenance

During cleaning and maintenance work, make sure the safety instructions set out on page 10 are complied with.

Cleaning the hood body

- If your kitchen hood is made from stainless steel, use proprietary cleaners mentioned in the product instructions.
- Never use metallic scourers, nor abrasive or corrosive products.
- Dry the kitchen hood using a cloth that does not produce fibres.
- The use of vapour cleaners is not recommended.

Cleaning the metal filters

To remove the filters from their fittings, press lightly on the locks and then pull them off.

The metal filters can be cleaned by soaking them in hot water with neutral detergent until

the fat dissolves and then rinsing them under the tap or using special anti-grease products. They can also be washed in a dishwasher. In this case, it is advisable to stack them vertically to avoid food residues to stick to them.

Cleaning in a dishwasher may damage the metallic surface (blackening it), although this will not affect its fat retention capacity.

Once clean, leave them to dry off and then fit them onto the kitchen hood.

Changing light bulbs

Fig. 2

Proceed as follows:

- Unscrew the lamp cover.
- Change the broken/ burnt out lamp.
- Screw in the lamp cover back in.

Problem solving

Proceed with the following checks before calling the Technical Service:

Problem	Possible cause	Solution
The kitchen hood does not work.	The mains cable is not connected to the network. There is no current in the network.	Connect the mains cable to the network. Provide current to the network.
The kitchen hood does not extract sufficiently or vibrates.	Filters are saturated with fat. Obstruction in the air outlet.	Change or clean the active charcoal and/or metal filters. Remove the obstruction.
The lamps do not light up.	The lamps are blown. The lamps are slack.	Change the lamps. Tighten the lamps.

Sizes and specifications

See page 22.

KÜPPERSBUSCH reserves the right to make changes and corrections to its products as it deems necessary, without altering their basic characteristics.

Accessories supplied

- 4 Wall plugs (Ø8 x 40).
- 4 Long bolts (Ø5 x 45).
- 2 Wall plugs (Ø6 x 30).
- 2 Long bolts (Ø4 x 30).
- 2 Ø6,4 x Ø18, washers.

Installation

Fig. 1

On installing the kitchen hood make sure that the Safety Instructions set out on page 10 are complied with.

 
To obtain optimum performance, the external conduct must not be more than FOUR METRES long, have no more than two 90° angles and its diameter must be at least Ø120.

 
- 1) Mark and drill the points for fitting the wall plugs onto the wall (P) (Ø8 x 40). See figure 1.
- 2) Place the wall plugs and screw the long long bolts (Q) (Ø5 x 45) with the head of the screw protruding 5 mm from the wall.
- 3) Hang the cooker hood onto the long bolts (Q). Level the unit and tighten the long bolts.
- 4) Mark the position of the wall plugs (R) (Ø8 x 40) through the inner side of the kitchen hood.
- 5) Loosen the long bolts (S) (Ø5 x 45) and remove the hood. If your hood is made of stainless steel, remove the plastic film before mounting.
- 6) Drill the holes and put the wall plugs (R).
- 7) Hang the hood, tighten the long bolts (Q) and (S) (Ø5 x 45) with washers (T) (Ø6, 4 x Ø18).

Active charcoal filters (Optional)

When exterior gas extraction is not possible, then the kitchen hood may be set to purify the air by recycling it through active charcoal filters.

The active charcoal filters have an active life of between three to six months, depending on the individual conditions of use. These filters cannot be washed nor regenerated. They must be replaced once their useful life comes to an end.

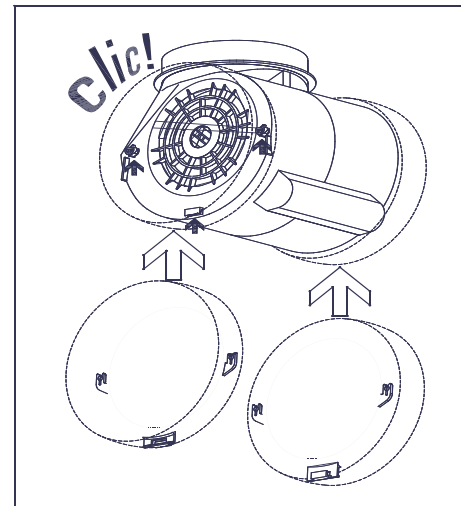

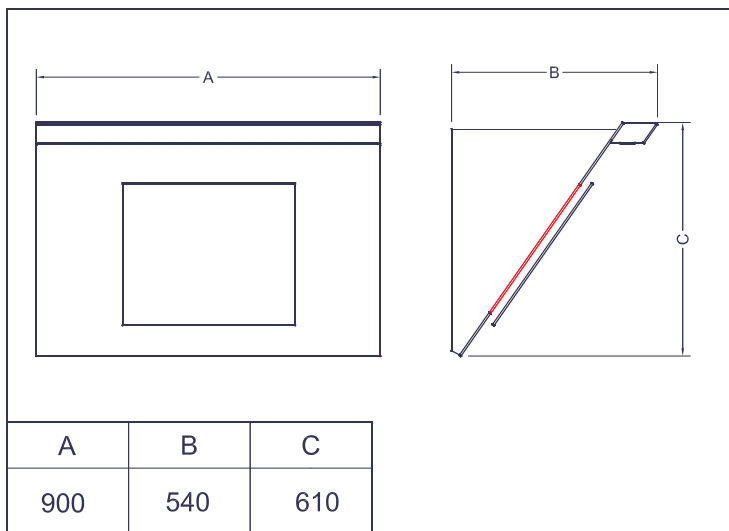


Küppersbusch
 Código Técnico:***** F.Nr. *****

POTENCIA NOM. LAMPARAS:
 NENNLEISTUNG LAMPEN:
 LAMPS POWER:
 PUISSANCE LAMPES:
 POTENCIA NOM. DAS LAMPADAS:
 POTENZA LAMPADINE:
 VERMOGEN LAMPEN:
 LAMPOR POTENTIAL:

F-PTX

CE 
 MADE IN EUROPE

Código Técnico	Tensión (V) de red	Frecuencia (Hz) de red	Potencia (W) de motor
*	220 – 240	50/ 60	*
*	110 – 127	60	*

* Ver Placa de Características en el interior de la campana.

CODE NR.	NETZ SPANNUNG (V)	FREQUENZ (Hz)	NENNLEISTUNG (W) MOTOR
*	220 – 240	50/ 60	*

* Siehe Typenschild im Innern der Dunstabzughauben.

Technical Code	Network Tension (V)	Network Frequency (Hz)	Motor Power (W)
*	220 – 240	50/ 60	*
*	110 – 127	60	*

* Check Characteristics label inside the hood.


Code Technique	Tension (V) Réseau	Fréquence (Hz) Réseau	Puissance (W) Moteur
*	220 – 240	50/ 60	*

* Voir Plaque des Caractéristiques à l'intérieur de la hotte.

Código Técnico	Tensão (V) Da Rede	Frequência (Hz) Da Rede	Potência (W) Motor
*	220 – 240	50/ 60	*

* Ver Placa de características no interior do exaustor.

 FIG.1

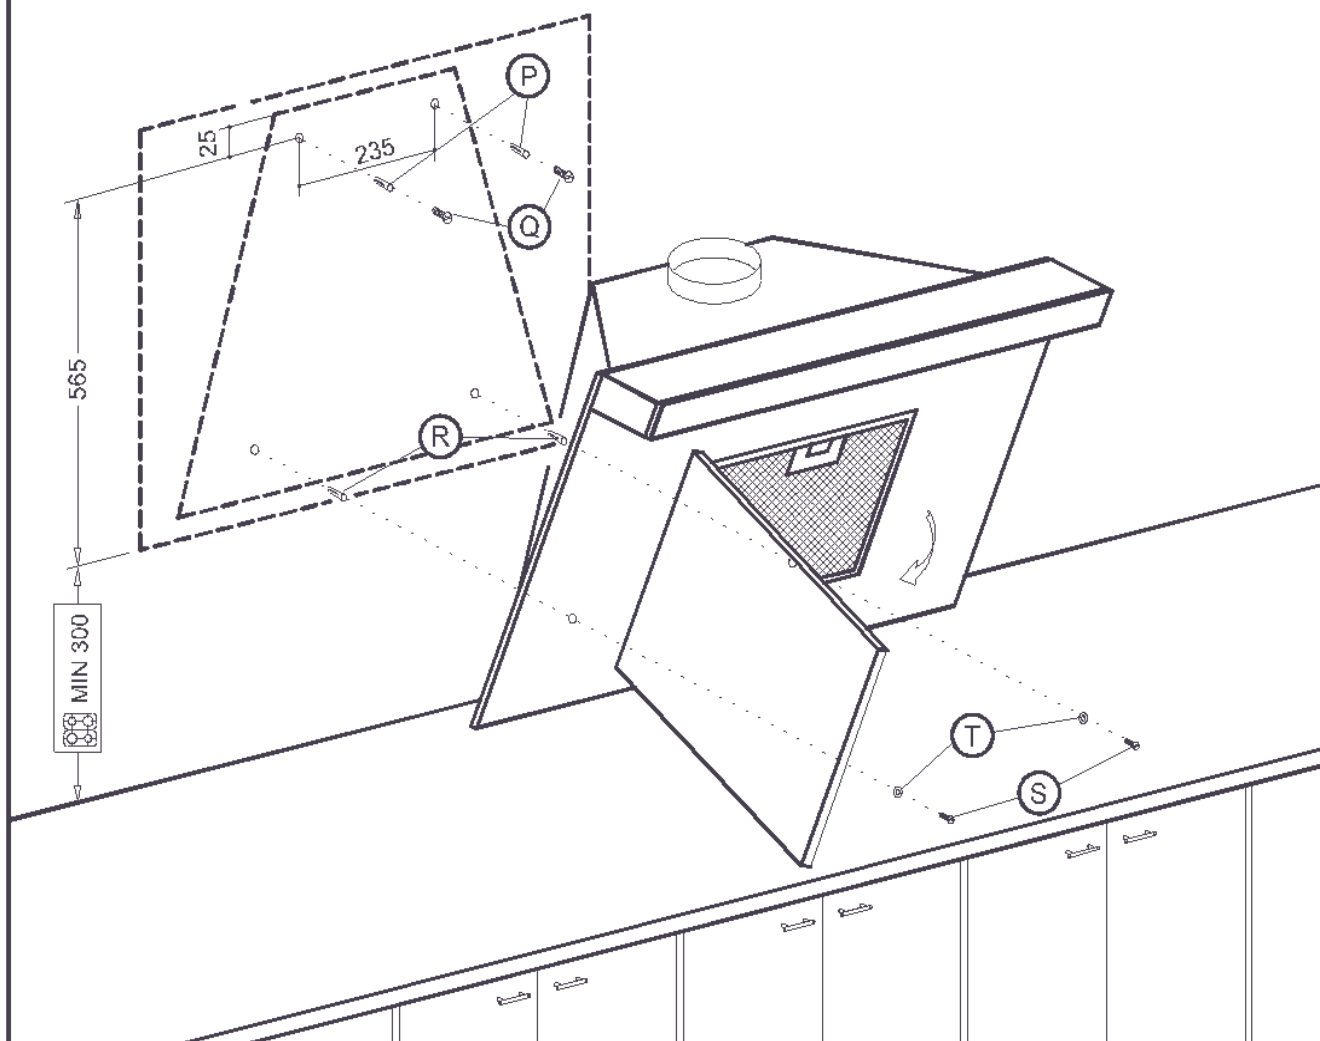

KÜPPERSBUSCH HAUSGERÄTE AG
Küppersbuschstraße 16 · D-45883 Gelsenkirchen · Postfach 100132 · D-45801 Gelsenkirchen
Telefon (0209) 401-0 · Telefax (0209) 401-303

Küppersbusch

ALLERFEINSTE KÜCHENTECHNIK