


# BEDIENUNGSANWEISUNG

mit Montageanweisungen

# INSTRUCTIONS FOR USE

and installation

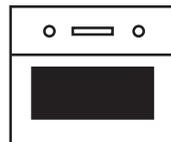

DE EN ES PT FR

**CBM6330.0**



Lesen Sie unbedingt die Gebrauchsanleitung und den Montageplan vor Aufstellung, Installation sowie Inbetriebnahme.

Please read the users and installation instructions carefully before installation of the appliance and before starting to use it.

## **Service und Kundendienst**

Telefon: 0209 – 401 631

Email: [kundendienst@kueppersbusch.de](mailto:kundendienst@kueppersbusch.de)

**Küppersbusch**  
FÜR KÜCHEN MIT STIL

# Safety Warnings

## General advice

---

Follow ALL the safety warnings!



### Caution, Danger of overheating!

When using the oven, do not cover the bottom with aluminium foil or place pots, frying pans or the like inside. If this happens, the oven will overheat, causing damage to the enamel.

- The oven becomes hot when in use. The cooling fan turns on when the oven overheats. The cooling fan will remain on until the oven has cooled down, even after the appliance has been turned off. The noises made by the fan are normal and do not mean that it is damaged.
- When preparing a dish with alcohol or yeast with settings that use hot air, there may be a vinegary smell. If the smell is unpleasant, use a function that does not include the fan, such as top/bottom heat.
- The electronic clock features Touch-Control technology. To operate, simply touch the glass control symbols with **your fingertip**. **The touch control sensitivity continuously adapts to changing conditions.** Make sure that the glass surface of the control panel is clean and free of any obstacles when turning on the oven.
- If the oven does not respond correctly when you touch the glass, you will need to turn off the oven for a few seconds and then turn it back on after a few seconds. Doing this **causes the sensors to adjust automatically so that they will react once more to fingertip control.**

## Connection and use

---

- Only KÜPPERSBUSCH hobs have been manufactured and tested for use over a KÜPPERSBUSCH oven. Do not use other hobs.
- Any handling or repair to the appliance, including replacement of the feed cable, should be carried out by authorised Technical Service Personnel using original spare parts. Repairs or handling by others may damage the appliance or cause malfunctioning that could be hazardous to your safety
- Do not allow children to come near the oven while in use as it can reach very high temperatures.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is not for use by persons (including children) with reduced physical, sensorial or mental capacity, or those lacking experience and knowledge, except if they have been supervised and instructed regarding use of the device by a person responsible for their safety.

## Oven

---

- The oven must always be operated with the door closed.
- The manufacturer takes no responsibility for any use of the oven other than for the home preparation of food.
- Only use the oven after it has been installed inside the kitchen unit.
- **Do not store oil, fats or inflammable materials inside the oven. This may be dangerous if the oven is turned on.**
- Do not lean or sit on the open oven door. You could damage it, as well as endangering your safety.
- In order to cook food in the oven, place the tray or grid shelf supplied with it over the shelf runners inside the oven cavity. The tray and grid shelf have a system to make their partial outward movement easy for food handling.
- Do not place containers or food on the bottom surface of the oven. Always use the trays and grid.
- Do not pour water on the bottom surface of the oven when in use; this may damage the enamel. Open the oven door as little as possible during cooking. This will reduce power consumption.
- Use protective oven gloves when performing operations inside the oven.
- It is normal for condensation to occur on the oven door when cooking dishes with a high liquid content.

## Before first use

---

- Remove packaging and the old appliance.
- Remove packaging and recycle in an environmentally-friendly way.
- By returning the packaging material, raw materials are saved and also fewer waste products are generated. Old appliances still contain valuable material. Leave your old appliance at a collection point for valuable materials. Old appliances must be rendered inoperative before disposing of them in order to prevent improper use.

## Technical information

---

If you need to contact the after-sales service or order spare parts, you must provide the technical information supplied.

The oven's technical information is on the left, on the side frame. You can see it when the door is open.



## Cleaning and care

Please read this chapter before using the appliance for the first time.

If it is cleaned as it should be and regularly cared for, the oven should stay beautiful and as good as new for many years. Here is a series of instructions that allow you to care for and clean all of the surfaces thoroughly, without damaging them.

### *For all surfaces*

---



#### Danger of death

Do not use steam and/or pressure cleaning devices on the oven. The appliance could become damaged and may create a situation where there is danger of death



#### Danger of burning!

Leave the appliance to cool until you can touch it with your hand before cleaning it.

- Clean the appliance after each use. Stains or baked-on food that have not been removed may burn the next time the appliance heats up. Often, these types of stains or dirt cannot be removed without leaving marks.
- If there are light stains, clean the surfaces with a cloth, brush or soft sponge and hot water and some dishwashing detergent. Rinse with cold water so that there is no detergent left which might decolour the surface or cause more stains. Dry with a cloth immediately after.

### Never clean with



- aggressive products or bleaches that contain active oxygen, chlorine or other corrosive ingredients.
- cleaning products that can cause scratches, such as abrasive agents, steel wool, soapy steel wool, hard brushes, metal scourers, plastic sponges or sponges with a surface that scratches (scouring side)

## *Use of the oven*

---

The oven is determined for the cooking, roast, baking, and keeping warm of dishes.


Use the oven only if inserted in a suitable piece of furniture. Use the oven exclusively as described in these instructions for use. Any other use is not in accordance with the requirements and can lead to material damages or even personal damages. The manufacturer assumes no liability for damages which have originated from not designated use.

The oven is determined exclusively for the use in the private household. A commercial use is excluded. The oven is not suited for heating a room. The light in the oven is planned only to the lighting of the done space and not as a room lighting. The oven door is only the close the oven.



Use the oven only for cooking, roasting, baking, and keeping warm of dishes!

## Description of the appliance

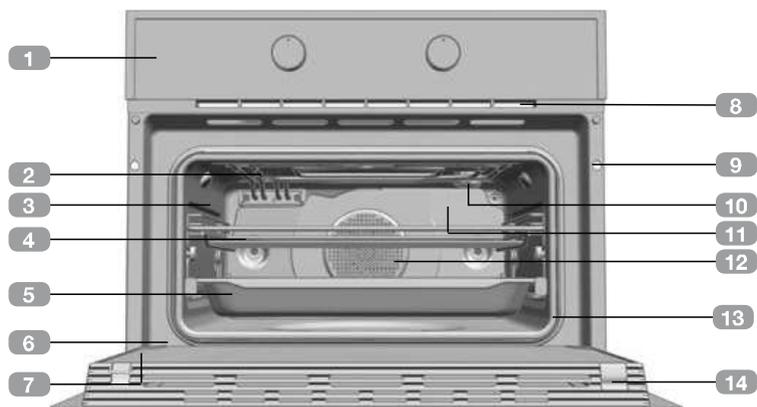

- |          |               |           |                    |
|----------|---------------|-----------|--------------------|
| <b>1</b> | Control panel | <b>8</b>  | Air cooling outlet |
| <b>2</b> | Grill element | <b>9</b>  | Unit mounting      |
| <b>3</b> | Tray supports | <b>10</b> | Lamp               |
| <b>4</b> | Grid shelf    | <b>11</b> | Back Wall Panel    |
| <b>5</b> | Tray          | <b>12</b> | Fan                |
| <b>6</b> | Hinge         | <b>13</b> | Oven Seal          |
| <b>7</b> | Inner Glass   | <b>14</b> | Door               |

## Control panel



- |          |                       |          |                          |
|----------|-----------------------|----------|--------------------------|
| <b>1</b> | Function control dial | <b>3</b> | Temperature control dial |
| <b>2</b> | Display               | <b>4</b> | Touch keys               |

## Control Panel



## Oven Functions



### INFORMATION

For a description of how to use each of the features, see the cooking guide that comes with your oven.



OVEN SWITCH-OFF



CONVENTIONAL



MAXIGRILL



CONVENTIONAL WITH FAN



MAXIGRILL WITH FAN



LOWER ELEMENT



TURBO + LOWER ELEMENT



TURBO



ECO



MICROWAVE + HOT AIR



MICROWAVE + GRILL




MICROWAVE

## Microwaves Power Levels

Microwave power output	Foods
200	Slow defrosting for delicate foods; keeping food hot
400	Cooking with little heat: boiling rice Rapid defrosting, heating baby food
600	Heating and cooking food
800	Cooking vegetables and food Cooking and heating carefully, Heating and cooking small portions of food
1000	Rapidly heating liquids

# Display description

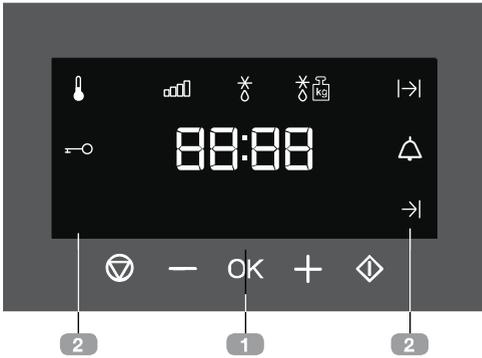

## 1 KEYS

**—**, **OK** and **+** : Enable you to program the functions.

**◇** : Enable you to start the cooking functions.

**⊘** : Enable you to stop the cooking functions.

## 2 SYMBOLS

**🔔** **WARNING TIMER**: Lights up when the clock/timer is selected. Generates an acoustic signal when the time is up. The oven does not turn off at the end of the timer period. This function can also be used while the oven is cooking.

**⌄** and **➡** **PROGRAMING**: Lights up to indicate that the oven is programed (cooking time, stop time or total).

- **⌄** **Cooking Time**: This program allows you to program the cooking time, after which the oven will turn off automatically.
- **➡** **Cooking Stop Time**: This setting allows you to program the time for cooking to stop, after which the oven will turn off automatically.
- **⌄** and **➡** **Cooking Time and Cooking Stop Time**: This setting allows you to

program the cooking time and cooking stop time. The oven switches on automatically at the set time and operates for the selected cooking time (Cooking Time). It then switches off automatically at the indicated time (Cooking Stop Time).

**🔒** **SAFETY BLOCK**: Indicates that the touch keys are blocked, preventing modifications by small children.

Other functions

**🔥** **HEATING**: Indicates that the oven is transmitting heat to the food.

**★**  
**⏰** **DEFROSTING BY TIME**: Lights up while the defrosting by time function is on.

**★**  
**⏰** **DEFROSTING BY WEIGHT**: Lights up while the defrosting by weight function is on.



## WARNING

The sensivity of the touch keys adapts continually to environmental conditions. Make sure the surface of the control panel is clean and free of obstacles when plugging in the oven.

If the display does not respond correctly when you touch the keys, unplug the oven for a few seconds and then plug it in again. Doing this causes the sensors to adjust automatically so that they will react once more to fingertip control.

## SETTING THE TIME

- When you plug the oven, you will see the clock flashing 12:00.
- Press **—** or **+** to adjust the hours.
- Press **OK** to confirm the hours.
- Press **—** or **+** to adjust the minutes.
- Press **OK** to confirm the minutes.

- If you wish to modify the time, press **—** or **+** until the time starts flashing. Press **OK** and follow the instructions in the previous points.



### WARNING

In the event of power failure, the clock settings will be erased and 12:00 will flash on the clock display. Reset it and program again.

## HIDING AND UN-HIDING THE CLOCK

- If you wish to hide the clock press  for 5 seconds.
- If you wish to see the clock on the display again, press  for 5 seconds.

## Oven use

### OVEN FUNCTIONS

- After setting the clock, the oven is ready for use. Select a cooking function with the function selector dial and temperature with the temperature control dial.



### INFORMATION

In models with an electronic temperature control, when the selector switch is turned, the display will show the temperature.

After selecting the temperature, the clock will automatically reappear.

- You will notice that the  symbol lights up during cooking to indicate that heat is being transmitted to the food. This symbol disappears when the selected temperature has been reached.
- Set the controls to  to turn off the oven.



### INFORMATION

When a cooking cycle begins, the oven will automatically display the total the time for the cycle progress, if the cooking time or cooking stop time have not been set.

### OVEN TIMER OPERATION

#### Programing the buzzer

1. Touch **—** or **+** until the  symbol on the display starts flashing, then press **OK**. The indication "0\_00" will appear on the display.
2. Select the time after which you want the alarm to sound by pressing **—** or **+**. You will hear 2 beeps to confirm that the time has been set and the clock will start counting down from the selected time. The  symbol will flash slowly.
3. Once the time has expired, an acoustic signal will sound for 90 seconds and the  symbol will flash quickly.



## NOTE

With the Buzzer function, the oven will not turn off when the time expires.

4. Touch any key to stop the alarm. The  symbol will then disappear.

If you wish to modify the time on the buzzer, press **—** or **+** until the  flash and the hours are not flashing; then press **OK** and repeat the steps shown. Upon entering the timer control, the time currently remaining will appear which you will be able to adjust.



## NOTE

With the Buzzer function, the remaining time will show permanently on the display. With this programmed function, it is not possible to view the time or the total programmed cooking time.

### Programing Cooking Time

1. Select a function and a cooking temperature using the oven commands.
2. Press **—** or **+** until the **l→l** symbol on the display starts flashing, then press **OK**. The indication “0\_00” will appear on the display.
3. Select the time after which you want the alarm to sound by pressing **—** or **+**. You will hear 2 beeps to confirm that the time has been set and the clock will start counting down from the selected time. The **l→l** symbol will flash.
4. Once the cooking time is up, the oven will turn off, an alarm will sound and the **l→l** symbol will flash.
5. Press  to stop the alarm and turn off the **l→l** symbol. The oven will switch on again.
6. Set the controls to  position to turn off the oven.

You can change the remaining cooking time at any time by touching **—** or **+** until the **l→l** symbol starts to flash. Press **OK** to change the time.

### Programing the Cooking Stop Time

1. Select a cooking function and a temperature.
2. Press **—** or **+** until the **→l** symbol on the display starts flashing, then press **OK**. The indication “0\_00” will appear on the display.
3. Select the time after which you want the alarm to sound by pressing **—** or **+**. You will hear 2 beeps to confirm that the time has been set and the clock will start counting down from the selected time. The **→l** symbol will flash.
4. When the cycle is finished, the oven will turn itself off, an alarm will sound and the **→l** symbol will flash.
5. Press  to stop the alarm and turn off the **→l** symbol. The oven will switch on again.
6. Set the controls to  position to turn off the oven.

You can change the remaining cooking time at any time by touching **—** or **+** until the **→l** symbol starts to flash. Press **OK** to change the time.

### Programing the Cooking Time and Cooking Stop Time

1. Select a cooking function and a temperature.
2. Press **—** or **+** until the **l→l** symbol on the display starts flashing, then press **OK**. The indication “0\_00” will appear on the display.
3. Select the cooking time by touching **—** or **+**. You will hear 2 beeps, the

remaining time will appear on the display and the  symbol will flash.

4. Press **OK** to select the option.
5. Press **-** or **+** until the  symbol on the display starts flashing, then press **OK**. The indication "0\_00" will appear on the display.
6. Select the cooking end time by pressing **-** or **+**.
7. The oven will remain disconnected with the  and  symbols lit up. The oven is now programmed.
8. When it is time to start cooking, the oven will turn on and will operate for the programmed time.
9. While cooking, the remaining cooking time will be displayed and the  symbol will flash slowly.
10. When the cooking time is up, the oven will turn off, a buzzer will sound, and the  symbol will flash quickly.
11. Press  to stop the buzzer and turn off the  symbol. The oven will switch on again.
12. Set the controls to  position to turn off the oven.

You can change the remaining cooking time at any time by touching **-** or **+** until the  symbol starts to flash quickly. Press **OK** to change the time. **+**

## MICROWAVE

---

1. Select the microwave function.
2. The display shows 00:30 (Quick start function) by default. Press **-** or **+** until the display shows 1:00.
3. Press **OK** to confirm.
2. The display shows the default cooking time. Select the desired cooking time by pressing **-** or **+**.
3. Press **OK** to confirm.

4. The display shows the default Power setting. Select the desired power setting by pressing **-** or **+**.
5. Press **OK** to confirm.
6. Press  to start the microwave function with the desired parameters.

## QUICK START

---

1. Select the microwave function.
2. Press  and the microwave starts immediately to operate in the Microwave function at maximum power for 30 seconds.
3. If you want to increase the operating time press  again. Each time you press this key the operating time will be increased by 30 seconds.

## DEFROST BY TIME

---

1. Select the microwave function.
2. Press **-** or **+** until the  symbol appears on the display.
3. Press **OK** to select the option.
4. The display shows the default defrost time. Select the desired cooking time by pressing **-** or **+**.
5. Press  to start the defrost by time function with the desired parameters.



### NOTE

See Cooking Guide for advice on defrosting times.



### INFORMATION

When the display shows the word "Turn", open the door, turn the food and press  to continue.

## DEFROST BY WEIGHT

1. Select the microwave function.
2. Press **—** or **+** until the  symbol appears on the display.
3. Press **OK** to select the option.
4. The display shows “F01” blinking as default. Select the desired defrost option by pressing **—** or **+**.
5. Press **OK** to confirm.
6. The display shows default weight blinking. Select the desired weight by pressing **—** or **+**.
7. Press  to start the defrost by weight function with the desired parameters.

The following table shows the defrosting by weight function programs, indicating weight intervals, and defrosting and standing times (in order to ensure the food is of a uniform temperature):

Prog.	Food	Weight (kg)	Time (min)	Standing time (min)
F01	Meat	0.10–2.00	2:10–43	20–30
F02	Poultry	0.10–2.50	2:20–58	20–30
F03	Fish	0.10–2.00	2–40	20–30
F04	Fruit	0.10–0.50	2:36–13	10–20
F05	Bread	0.10–0.80	2:25–19	10–20



### INFORMATION

When the display shows the word “Turn”, open the door, turn the food and press  to continue.

## COMBINED FUNCTIONS

1. Select a microwave + conventional oven function with the function selector.
2. The display shows the default cooking time. Press **OK** to select.
3. Select the desired cooking time by pressing **—** or **+**.
4. Press **OK** to confirm.
5. The display shows the default Power setting. Select the desired power setting by pressing **—** or **+**.
6. Press **OK** to confirm.
7. Press  to start the function with the desired parameters.



### NOTE

The temperature can be changed anytime rotating the temperature control dial.



### NOTE

The maximum power that can be selected is 600 W.

## Safety instructions

### SAFETY BLOCK

This function can be selected at any time while using the oven.

To activate the function, press **OK** for a few seconds until you hear a beep and the  symbol appears on the display. The oven is locked.

If the oven is off and you activate the safety block function, the oven will not work even if a cooking function is selected.

If this function is activated while you are cooking, it will only lock the display and keys.

To deactivate the safety block function, press **OK** for a few seconds until you hear a beep.

## SHOWROOM MODE

---

The showroom mode is used in showrooms, to show the clients how the oven works as **described in every function, but there's no** activation of the heating loads.

To activate the showroom mode press **—** and **OK**.

To deactivate the function press **—** and **OK** again.



# Küppersbusch

## **Küppersbusch Hausgeräte GmbH**

Postfach 10 01 32, D-45801 Gelsenkirchen,  
Küppersbuschstraße 16, D-45883 Gelsenkirchen  
Telefon: (0209) 401-0, Telefax: (0209) 401-303  
[www.kueppersbusch.de](http://www.kueppersbusch.de)

## **Teka Austria GmbH**

Eitnergasse 13, A-1230 Wien  
Telefon: (01) 86680-15, Telefax: (01) 86680-50  
[www.kueppersbusch.at](http://www.kueppersbusch.at)

