

# KAFFEE-/CAPPUCCINO-VOLLAUTOMAT

Bedienungsanleitung

# COFFEE AND CAPPUCCINO MAKER

Instructions

# MACHINE À CAFÉ ET À CAPPUCCINO

Mode d'emploi

# MACCHINA PER CAFFÈ E CAPPUCCINO

Istruzioni per l'uso

# KOFFIE- EN CAPPUCCINOAPPARAAT

Gebruiksaanwijzingen

# CAFETERA PARA CAFÉ Y CAPUCHINO

Instrucciones para el uso

# MÁQUINA DE CAFÉ E CAPPUCCINO

Instruções de utilização

# ΜΗΧΑΝΗ ΚΑΦΕ ΚΑΙ CAPPUCCINO

Οδηγίες χρήσης

# КОФЕМАШИНА ДЛЯ ПРИГОТОВЛЕНИЯ КОФЕ И КАПУЧЧИНО

Инструкции по эксплуатации


# EKSPRES DO KAWY I KAWY CAPPUCCINO

Instrukcja obsługi

# KAHVE VE CAPPUCCINO MAKİNASI

Kullanım talimatları

**EKV6500.1W EKV6500.1J**

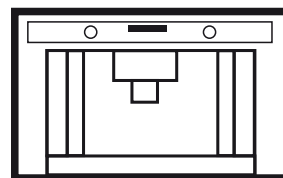

**Küppersbusch**

ALLERFEINSTE KÜCHENTECHNIK



ME 10

# Küppersbusch-Kundendienst

## Zentrale Kundendienst- / Ersatzteilanforderung

### Deutschland:

Küppersbusch Hausgeräte GmbH  
Küppersbuschstraße 16  
45883 Gelsenkirchen

Telefon: 0209-401631  
Telefax: (0209) 4 01-7 14 / 7 15  
Internet: [www.kueppersbusch.de](http://www.kueppersbusch.de)

Sie erreichen uns:

Montag bis Donnerstag von 8:30 Uhr bis 18:00 Uhr  
Freitag von 8:30 Uhr bis 17:00 Uhr

Außerhalb der Dienstzeiten teilen Sie uns Ihre Wünsche bitte per  
Telefax oder Internet unter  
[www.kueppersbusch.de](http://www.kueppersbusch.de) mit.

### Österreich:

Teka Austria GmbH  
Eitnergasse 13  
1230 Wien

Telefon: (01) 8 66 80-15  
Telefax: (01) 8 66 80-50  
Internet: [www.kueppersbusch.at](http://www.kueppersbusch.at)

Sie erreichen uns:

Montag bis Freitag von 8:00 bis 17:00 Uhr

Außerhalb der Dienstzeiten teilen Sie uns Ihre Wünsche bitte per  
Telefax oder Internet unter  
[www.kueppersbusch.at](http://www.kueppersbusch.at) mit.

### Bitte beachten Sie:

Damit unser Kundendienst Reparaturen sorgfältig vorbereiten und die benötigten Ersatzteile bereitstellen kann, benötigen wir bei Ihrer Kundendienstanforderung die folgenden Informationen:

1. Ihre genau Anschrift
2. Ihre Telefon- und ggf. Telefaxnummer
3. Wann kann der Kundendienst Sie besuchen?
4. Die genaue Gerätebezeichnung: Mod. und F.-Nr. (Typenschild und/oder Kaufbeleg zu Rate ziehen)
5. Das Kaufdatum oder Lieferdatum
6. Die genaue Beschreibung des Problems oder Ihres Service-Wunsches

Halten Sie zunächst bitte zusätzlich Ihren Kaufbeleg bereit.  
So helfen Sie uns, unnötigen Zeit- und Kostenaufwand zu vermeiden  
und auch für Sie effizienter zu arbeiten.

# Garantiebedingungen




Zusätzlich zu seinen Gewährleistungsansprüchen aus seinem Kaufvertrag mit dem Händler leisten wir dem Endabnehmer direkt Garantie für Küppersbusch-Hausgeräte. Der Umfang unserer Garantie wird nachstehend geregelt:

















1. Mängel am Gerät, die nachweislich auf einem Material- und/oder Herstellungsfehler beruhen, werden nach Maßgabe der folgenden Regelungen unentgeltlich behoben, wenn Sie uns unverzüglich nach Feststellung und innerhalb von 24 Monaten nach Lieferung an den ersten Endabnehmer angezeigt werden. Bei gewerblichem Gebrauch oder gleichzusetzender Beanspruchung beträgt die Garantiefrist lediglich 12 Monaten. Tritt der Mangel innerhalb von 6 Monaten ab Lieferung auf, wird vermutet, dass es sich um einen Material- oder Herstellungsfehler handelt.
2. Für leicht zerbrechliche Teile, wie z. B. Glas, Kunststoff und Glühlampen, wird keine Garantie übernommen. Geringfügige Abweichungen von der Soll-Beschaffenheit, die für den Wert und die Gebrauchstauglichkeit des Geräts unerheblich sind, begründen keinen Garantiespruch. Ebenso wenig leisten wir Garantie bei Schäden aus chemischen und elektrochemischen Einwirkungen von Wasser sowie allgemein ungewöhnlichen Umweltbedingungen oder sachfremden Betriebsbedingungen oder wenn das Gerät mit ungeeigneten Stoffen in Berührung gekommen ist. Schließlich leisten wir auch keine Garantie, wenn Mängel am Gerät auf Transportschäden, die nicht von uns zu vertreten sind, auf nicht fachgerechte Installation und Montage, auf Fehlgebrauch, auf mangelnde Pflege oder auf Nichtbeachtung der Bedienungs- oder Montagehinweise zurückzuführen sind. Der Geräteanspruch erlischt, wenn Reparaturen oder Eingriffe in das Gerät von Personen vorgenommen werden, die hierzu nicht von uns ermächtigt sind, oder wenn unsere Geräte mit Ersatzteilen, Ergänzungs- oder Zubehörteilen versehen werden, die keine Originalteile sind, und dadurch ein Defekt verursacht wurde.
3. Unsere Garantieleistung besteht darin, dass wir nach unserer Wahl entweder mangelhafte Teile unentgeltlich instand setzen oder durch einwandfreie Teile ersetzen. Instandsetzungen werden nach Möglichkeit am Aufstellungsort vorgenommen. Zur Reparatur anstehende Geräte sind so zugänglich zu machen, dass uneingeschränkt Handhabung, Ausbau und Einbau durch die Techniker möglich ist und keine Beschädigungen an Möbeln, Bodenbelag etc. entstehen können. Bei Geräten, die nicht nach unseren Einbaurichtlinien montiert sind werden die anfallenden Zusatzleistungen in Rechnung gestellt. In jedem Fall der Inanspruchnahme von Garantieleistungen ist der Kaufbeleg vorzulegen und das Kauf – und – soweit hiervon abweichend – das Lieferdatum nachzuweisen. Ersetzte Teile gehen in unser Eigentum über.
4. In Fällen, in denen die Nachbesserung fehlschlägt oder von uns abgelehnt wird, liefern wir innerhalb der oben genannten Garantiezeit auf Wunsch des Endabnehmers kostenfrei gleichwertigen Ersatz.
5. Garantieleistungen bewirken weder eine Verlängerung der Garantiefrist noch setzen sie eine neue Garantiefrist in Lauf. Die Garantiefrist für eingebaute Ersatzteile endet mit der Garantiefrist für das ganze Gerät.
6. Weitergehende oder andere Ansprüche, insbesondere solche auf Ersatz außerhalb des Gerätes entstandener Schäden, sind – mit Ausnahme der Haftung für Schäden aus der Verletzung des Lebens, des Körpers oder der Gesundheit, die auf einer fahrlässigen Pflichtverletzung von uns oder einer vorsätzlichen oder fahrlässigen Pflichtverletzung unserer Erfüllungsgehilfen beruhen – ausgeschlossen.


Diese Garantiebedingungen gelten grundsätzlich nur für in Deutschland gekaufte Geräte. Soweit wir in dem entsprechenden Land über ein Kundendienstnetz verfügen, gelten diese Garantiebedingungen auch für ins Ausland verbrachte Geräte, vorausgesetzt sie weisen die technischen Voraussetzungen, wie z. B. Spannung, Frequenz, Gasart, für das entsprechende Land auf und sind für die jeweiligen Klima- und Umweltschutzbedingungen geeignet. Für im Ausland gekaufte Geräte gelten die von unserer jeweils zuständigen Auslandsgesellschaft oder Landesvertretung herausgegebenen Garantiebedingungen, die über Fachhändler oder direkt bei unserer Auslandsgesellschaft oder Landesvertretung angefordert werden können.

Gelsenkirchen, im November 2010  
KÜPPERSBUSCH HAUSGERÄTE GmbH




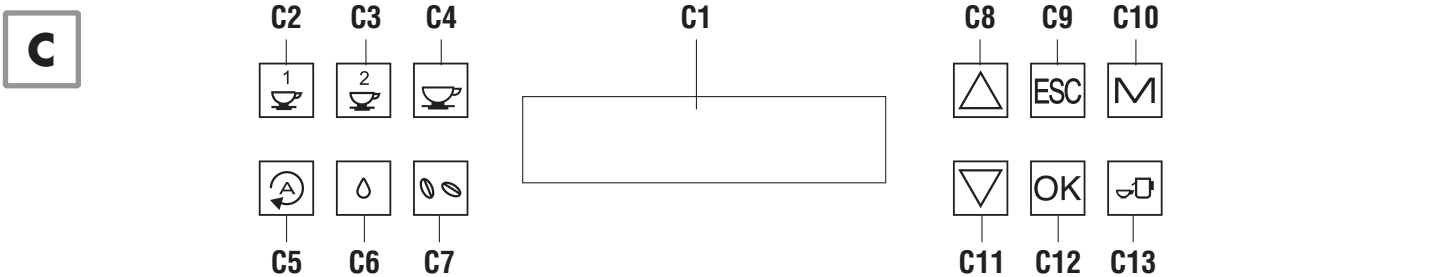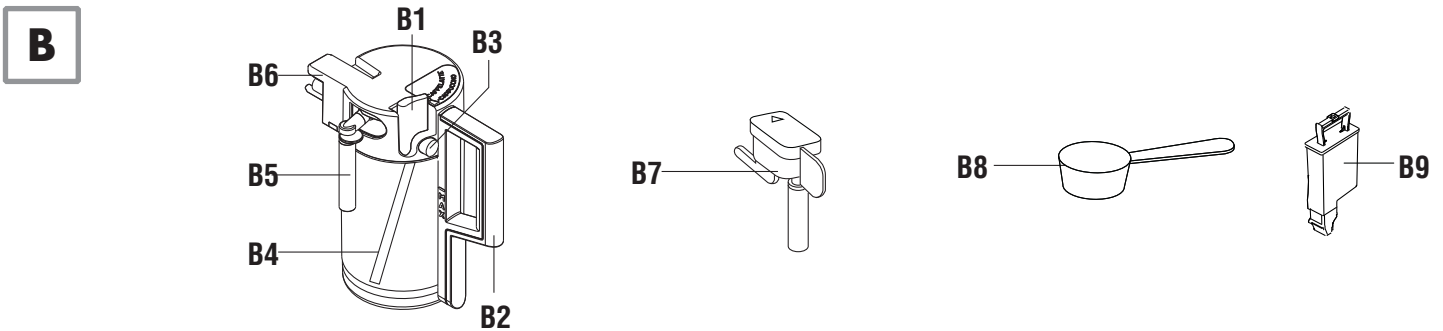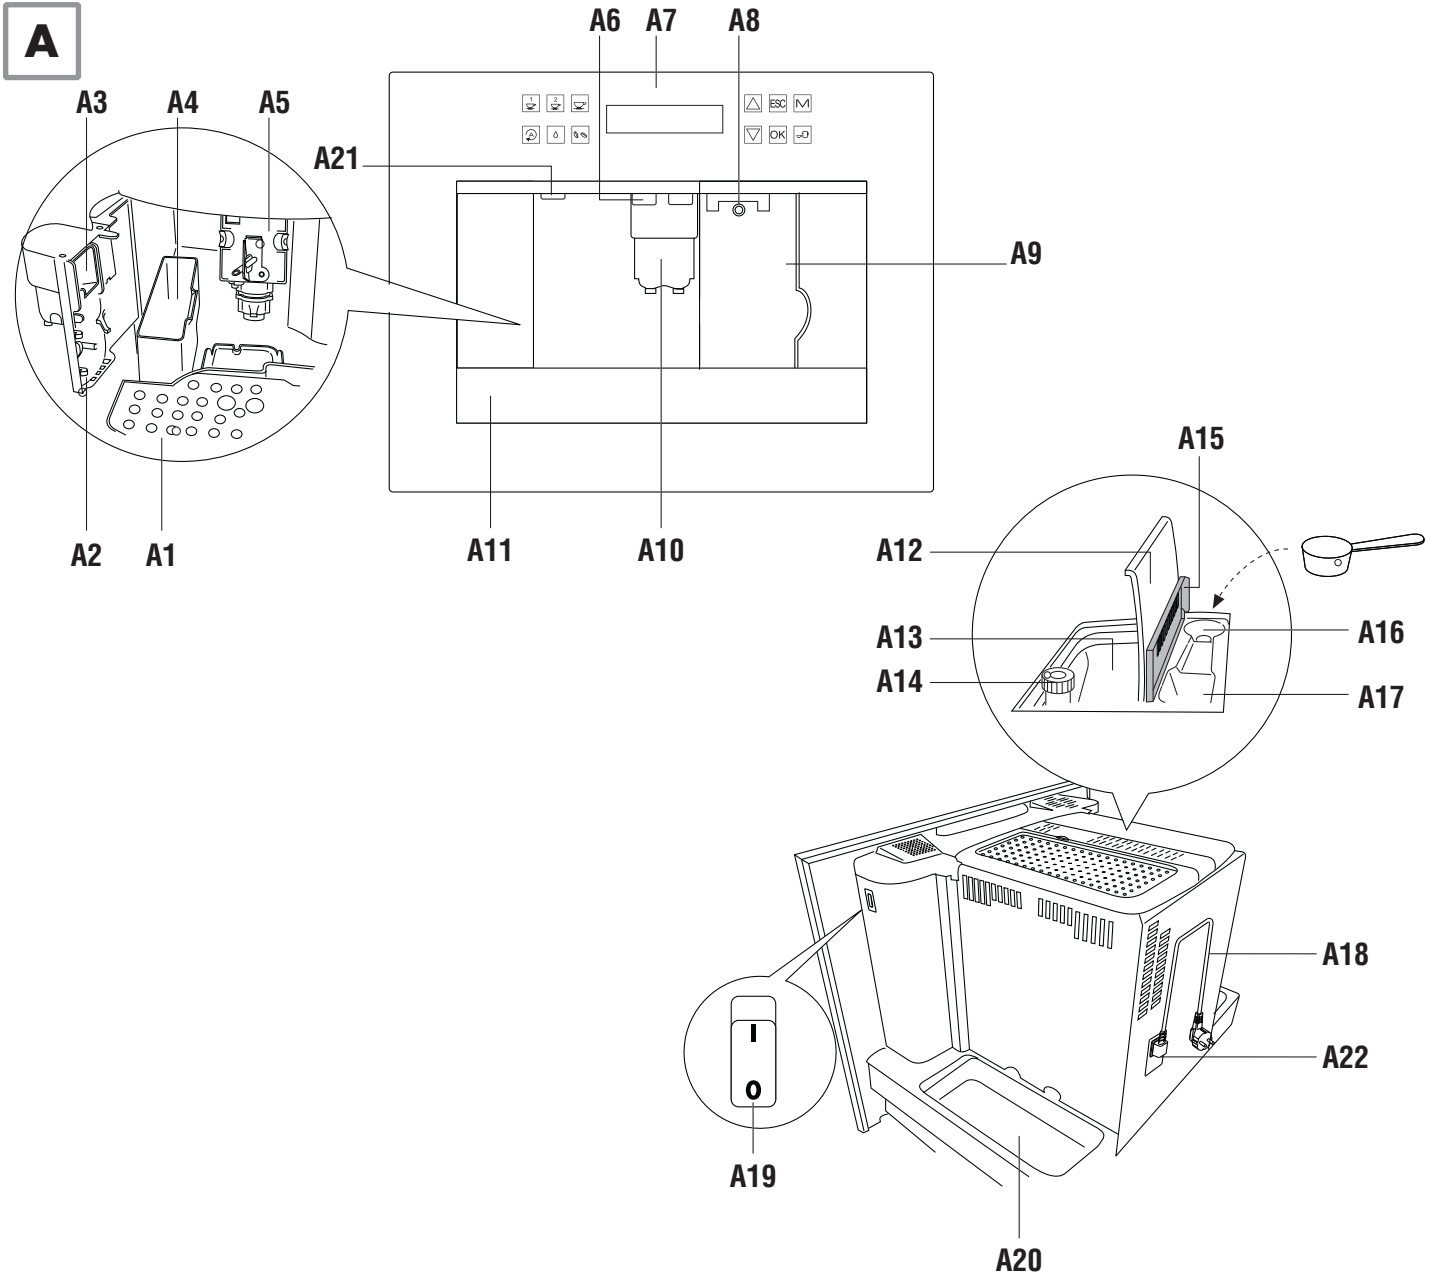

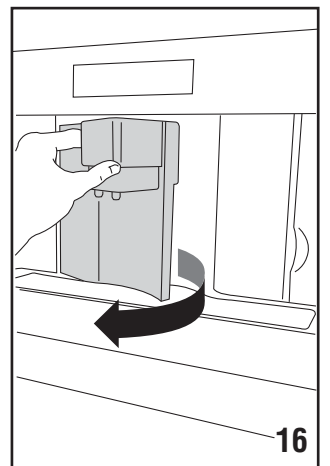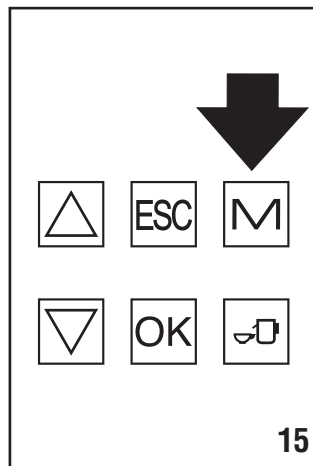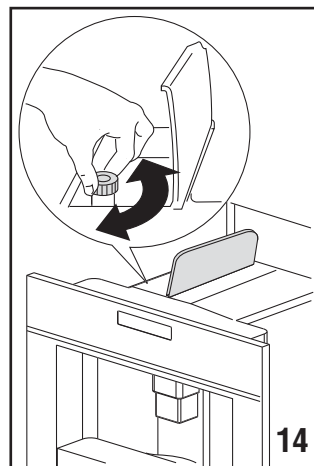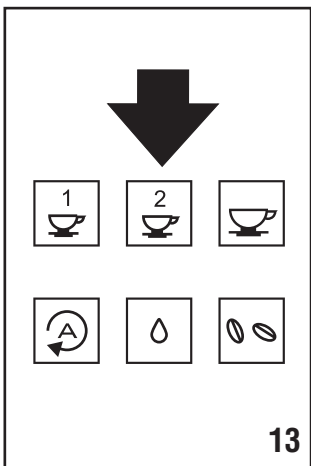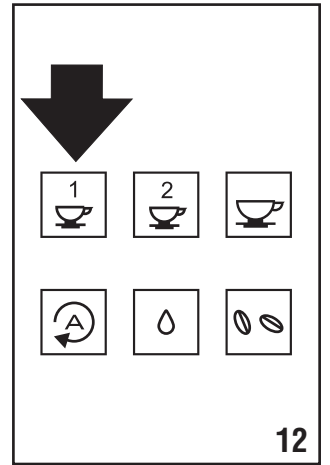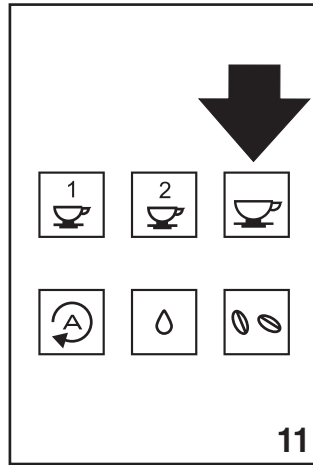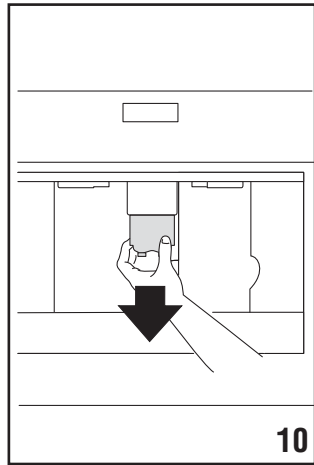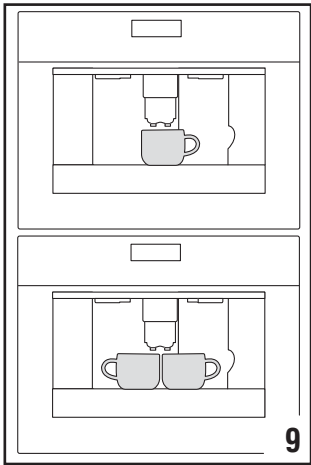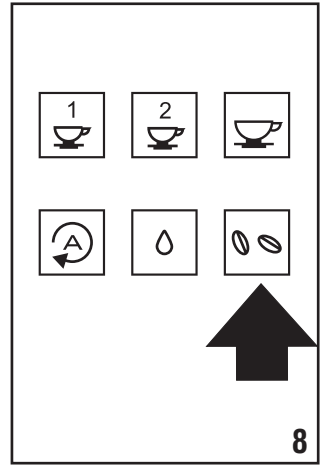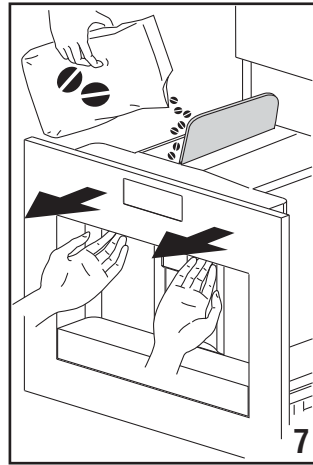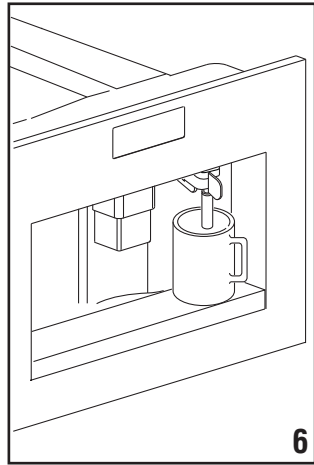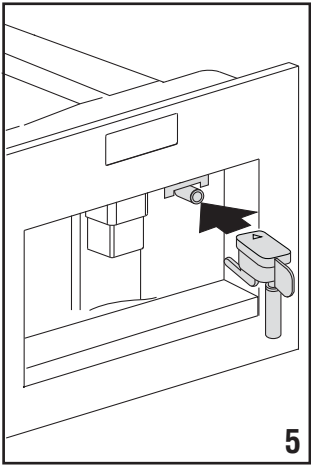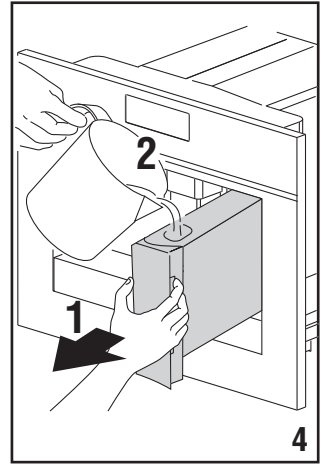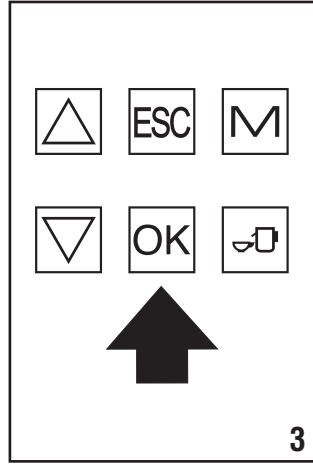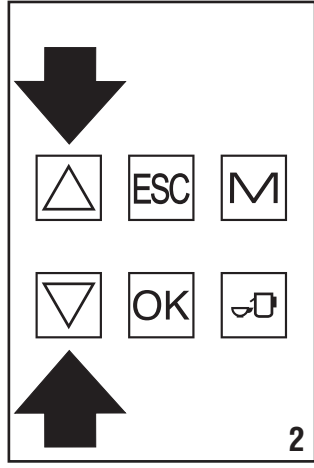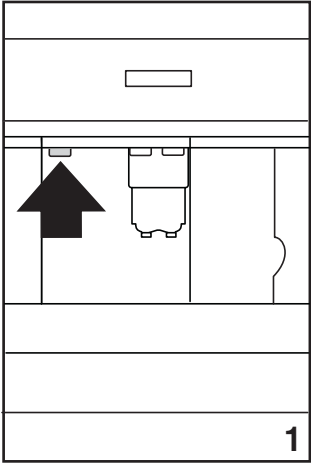


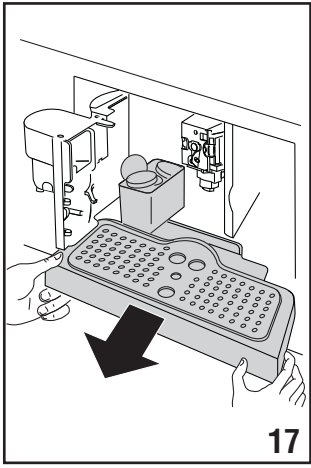


17

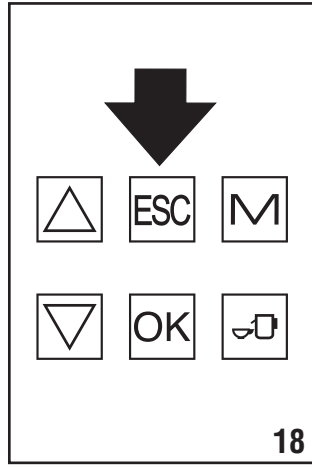


18

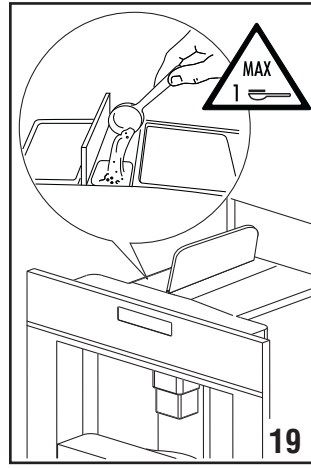


19

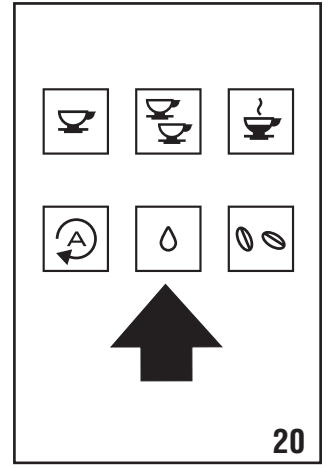


20

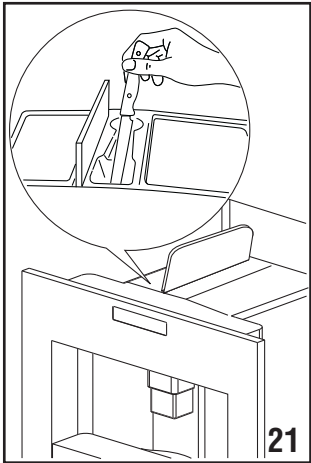


21

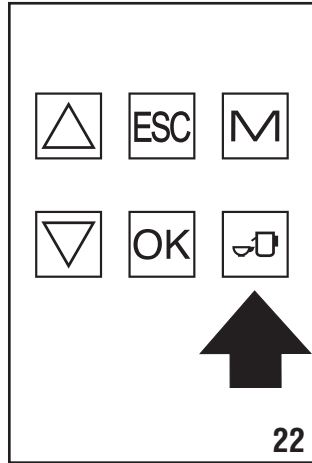


22

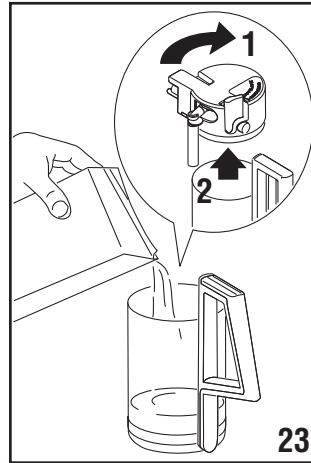


23

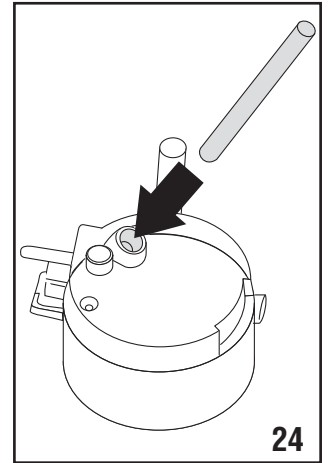


24

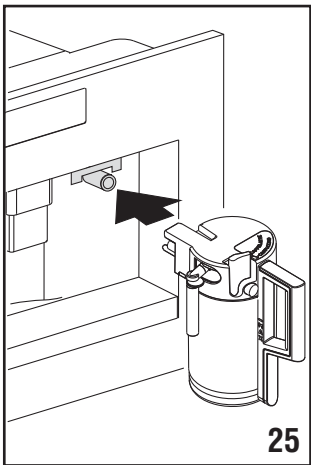


25

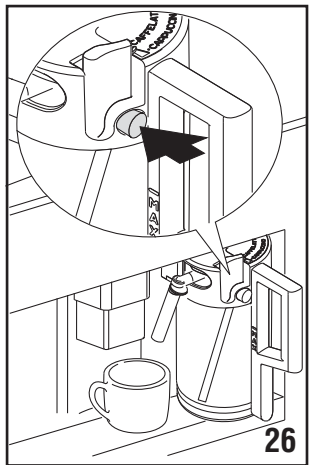


26

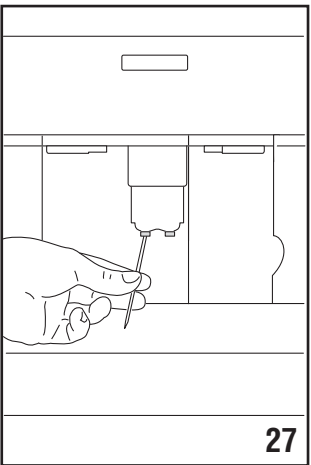


27

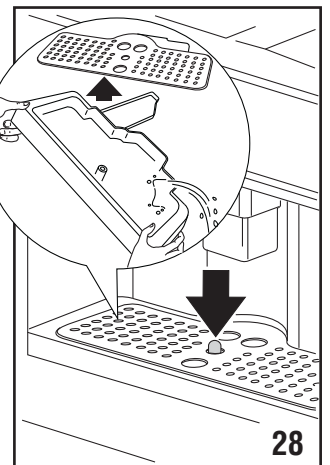


28

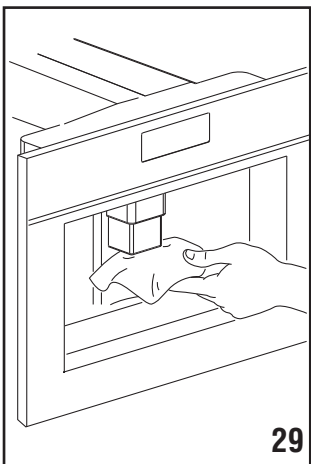


29

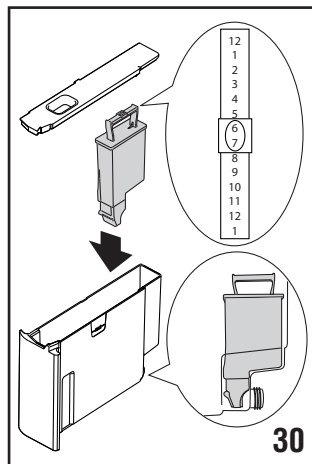

30

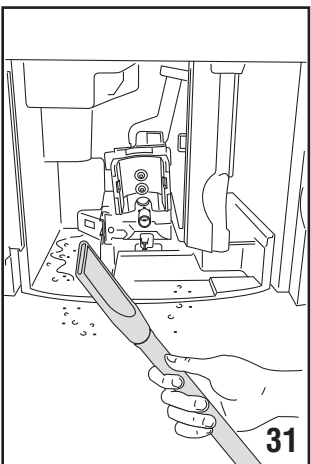

31

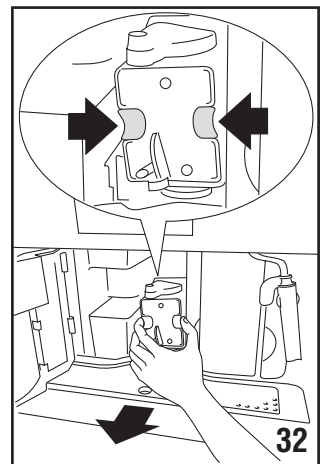

32

# CONTENTS

<b>INTRODUCTION</b> .....	<b>7</b>
Symbols used in these instructions.....	7
Letters in brackets .....	7
Troubleshooting and repairs .....	7
<b>SAFETY</b> .....	<b>7</b>
Fundamental safety warnings .....	7
Designated use.....	7
Instructions .....	7
<b>DESCRIPTION</b> .....	<b>7</b>
Description of the appliance .....	7
Description of milk container and accessories .....	8
Description of control panel .....	8
<b>PRELIMINARY CHECKS</b> .....	<b>8</b>
Controls after transport .....	8
Installing the appliance.....	8
Connecting the appliance .....	8
<b>AUTOMATIC CUP TRAY LIGHT</b> .....	<b>8</b>
<b>BUILT-IN INSTALLATION</b> .....	<b>9</b>
<b>USING THE APPLIANCE FOR THE FIRST TIME</b> .....	<b>11</b>
Installing the filter .....	11
Replacing the filter .....	11
Removing the filter .....	11
<b>TURNING ON AND HEATING UP</b> .....	<b>11</b>
<b>MAKING COFFEE USING COFFEE BEANS</b> .....	<b>12</b>
<b>CHANGING THE QUANTITY OF COFFEE IN THE CUP</b> ....	<b>12</b>
<b>ADJUSTING THE COFFEE MILL</b> .....	<b>12</b>
<b>MAKING COFFEE USING PRE-GROUND COFFEE (INSTEAD OF BEANS)</b> .....	<b>13</b>
<b>DELIVERING HOT WATER</b> .....	<b>13</b>
<b>CHANGING THE QUANTITY OF HOT WATER</b> .....	<b>13</b>
<b>MAKING CAPUCCINO</b> .....	<b>13</b>
<b>CHANGING THE QUANTITY OF MILK AND COFFEE FOR CAPPUCCINO</b> .....	<b>13</b>
Changing the quantity of milk .....	14
Changing the quantity of coffee.....	14
<b>CLEANING AND MAINTENANCE</b> .....	<b>14</b>
Cleaning the coffee maker .....	14
Cleaning the coffee grounds container .....	14
Cleaning the drip tray .....	14
Cleaning the water tank .....	14
Cleaning the spouts .....	14
Cleaning the pre-ground coffee funnel .....	14
Cleaning the inside of the coffee maker.....	14
Cleaning the infuser .....	14
Cleaning the milk container .....	15

<b>CHANGING AND SETTING MENU PARAMETERS</b> .....	<b>15</b>
Setting the language .....	15
Changing the length of time the appliance remains on.....	15
Setting the clock .....	15
Setting auto-start time .....	15
Changing coffee temperature .....	16
Setting water hardness .....	16
Programming coffee .....	16
Programming cappuccino .....	16
Programming water .....	16
Descaling.....	16
Resetting default values (reset).....	16
Statistics .....	16
Buzzer .....	16
Water filter.....	16

<b>TURNING THE APPLIANCE OFF</b> .....	<b>17</b>
--	-----------

<b>TECHNICAL SPECIFICATION</b> .....	<b>17</b>
--------------------------------------	-----------

<b>DISPOSAL</b> .....	<b>17</b>
-----------------------	-----------

<b>DISPLAYED MESSAGES</b> .....	<b>18</b>
---------------------------------	-----------

<b>TROUBLESHOOTING</b> .....	<b>19</b>
------------------------------	-----------

<b>RECIPES</b> .....	<b>20</b>
----------------------	-----------

# INTRODUCTION

Thank you for choosing the automatic coffee and cappuccino maker. We hope you enjoy using your new appliance. Take a few minutes to read these instructions. This will avoid all risks and damage to the machine.

## Symbols used in these instructions

Important warnings are identified by these symbols. These warnings must absolutely be respected.

Failure to observe the instructions could result in electric shock, serious injury, burns, fire or damage to the appliance.



**Danger!**

Failure to observe the warning could result in possibly life threatening injury from electric shock.



**Important!**

Failure to observe the warning could result in injury or damage to the appliance.



**Danger of burns!**

Failure to observe the warning could result in scalds or burns.



**N.B.:**

This symbol identifies important advice or information for the user.

## Letters in brackets

The letters in brackets refer to the legend in the Description of the Appliance on page 3.

## Troubleshooting and repairs

In the event of problems, first try and resolve them following the information given in the sections "Displayed messages" and "Troubleshooting". If this does not resolve the problem or you require further information, you should consult Customer Services by calling the number given on the "Customer Service" sheet.

If your country is not among those listed on the sheet, call the number given in the guarantee.

If repairs are required, contact Customer Services only.

The addresses are given in the guarantee certificate provided with the machine.

# SAFETY

## Fundamental safety warnings



**Important!** This is an household appliance only.

It is not intended to be used in:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.



**Danger!** This is an electrical appliance and may cause electric shock.

You should therefore respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the power cable as you could damage it.
- To disconnect the appliance completely, place the main switch (A23) on the side of the appliance in the 0 position.
- If the appliance is faulty, do not attempt to repair. Turn it off using the main switch (A19), unplug from the mains socket and contact Customer Services.
- If the plug or power cable is damaged, it must be replaced by customer

services only to avoid all risk.



**Important!** Keep all packaging (plastic bags, polystyrene foam) away from children.



**Important!** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children must be supervised to ensure they do not play with the appliance.



**Danger of burns!** This appliance produces hot water and steam may form while it is in operation.

Avoid contact with splashes of water or hot steam. Use knobs and handles.



**Important!** Do not grasp the coffee maker when it is out of the cabinet. Do not rest recipients containing liquids or inflammable or corrosive materials on top of the appliance. Place the accessories required to make the coffee (the measure for example) in the special holder. Do not rest large objects which could obstruct movement or unstable objects on the appliance.



**Important!** Do not use the appliance when extracted. Make sure the appliance is inactive before extracting it. The only exception is adjusting the coffee mill which must be done with the machine out (see the section "Adjusting the coffee mill").



**N.B.!** Use original or manufacturer recommended accessories and spare parts only.

## Designated use

This appliance is designed and made to prepare coffee and heat drinks. All other use is considered improper. This appliance is not suitable for commercial use. The manufacturer is not liable for damage deriving from improper use of the appliance. This appliance can be installed over a built-in oven if the latter is fitted with a cooling fan at the rear power: 3 kW).

## Instructions

Read these instructions carefully before using the appliance.

- Keep these instructions
  - Failure to respect these instructions may result in burns or damage to the appliance.
- The manufacturer is not liable for damage deriving from failure to respect these instructions.



**N.B.!** The appliance has a cooling fan. This comes on whenever coffee, steam or hot water is delivered. After several minutes, the fan goes off automatically.

# DESCRIPTION

## Description of the appliance

(page 3 - A)

- A1. Cup tray
- A2. Service door
- A3. Coffee guide
- A4. Coffee grounds container
- A5. Infuser
- A6. Led
- A7. Control panel
- A8. Hot water and steam nozzle
- A9. Water tank
- A10. Coffee spout (adjustable height)
- A11. Drip tray
- A12. Bean container lid
- A13. Container for coffee beans
- A14. Grinding adjustment knob
- A15. Pre-ground coffee funnel door



- A16. Compartment for measure
- A17. Pre-ground coffee funnel
- A18. Power cable
- A19. Main switch
- A20. Tray
- A21. On/stand-by button
- A22. IEC connector

## Description of milk container and accessories

(page 3 - B)

- B1. Frothed milk regulator
- B2. Milk container handle
- B3. CLEAN button
- B4. Milk intake tube
- B5. Frothed milk spout
- B6. Milk frother
- B7. Hot water spout
- B8. Measure
- B9. Water softener filter (if present)

## Description of control panel

(page 3 - C)



**N.B.!** A light touch is enough to activate the icon.

- C1. Display: guides the user in using the appliance.
- C2. icon to deliver a cup of coffee
- C3. icon to deliver two cups of coffee
- C4. icon to select the type of coffee (espresso, small cup, medium cup, large cup, mug)
- C5. icon : to perform a brief rinse to heat the infuser.
- C6. icon to deliver hot water
- C7. icon to select the coffee taste
- C8/C11 icons to scroll forwards or backwards through the menu and display the various modes
- C9. ESC icon to exit the selected mode
- C10. M icon to activate or deactivate menu parameter setting mode
- C12. OK icon to confirm the selected function
- C13. icon to deliver cappuccino

## PRELIMINARY CHECKS

### Controls after transport

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present.  
Do not use the appliance if it is visibly damaged.  
Contact Customer Services.

### Installing the appliance



**Attenzione!**

When installing the appliance, respect the following safety warnings:

- Installation must be performed by a qualified professional in compliance with legislation in force in the country of installation (see Built-in installation).
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children.
- Do not install the appliance in rooms where the temperature may drop to 0°C or lower.
- Customise the water hardness as soon as possible following the instructions in the "Setting water hardness" section.

### Connecting the appliance



**Danger!** Check that the mains power supply voltage corresponds to the value indicated on the appliance rating plate.

Connect the appliance to an efficiently earthed and correctly installed socket

with a minimum current rating of 10A only.

If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

To comply with safety directives, an omnipolar switch with a minimum contact distance of 3 mm must be installed.

Do not use multiple sockets or extensions.

To learn to use the appliance correctly, the first time you use it follow the detailed instructions in the following sections.



**Important!** Safety cutout devices must be included in the mains power supply in compliance with the installation regulations in the country concerned.

## AUTOMATIC CUP TRAY LIGHT

When the appliance is turned on, the led (A6) automatically light up the spout and cup tray.

The lights stay on until the appliance is turned off.

While coffee, steam or hot water is being delivered, the cooling fan comes on.

At the end of the function, the cooling fan remains on to avoid condensation forming inside the cabinet. After several minutes, the fan goes off automatically.



**N.B.:** The appliance also completes this cycle if switched off by pressing On/stand-by button (A21) (fig. 1).



**Important!** Do not look at the lights directly or using an optical instrument.




# BUILT-IN INSTALLATION



Verify the minimum measurements required for correct installation of the appliance.

The coffee maker must be installed in a column and the column must be firmly fixed to the wall with commercially available brackets.


## Important:

- Important: all installation or maintenance operations must be performed with the appliance disconnected from the mains electricity supply.
- Kitchen furniture in direct contact with the appliance must be heat resistant (65°C min).
- To guarantee correct ventilation, leave a gap at the bottom of the cabinet (see measurements in figure).

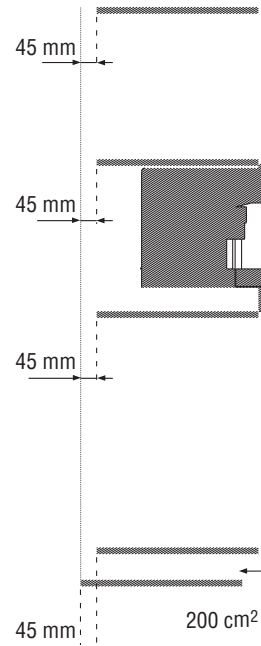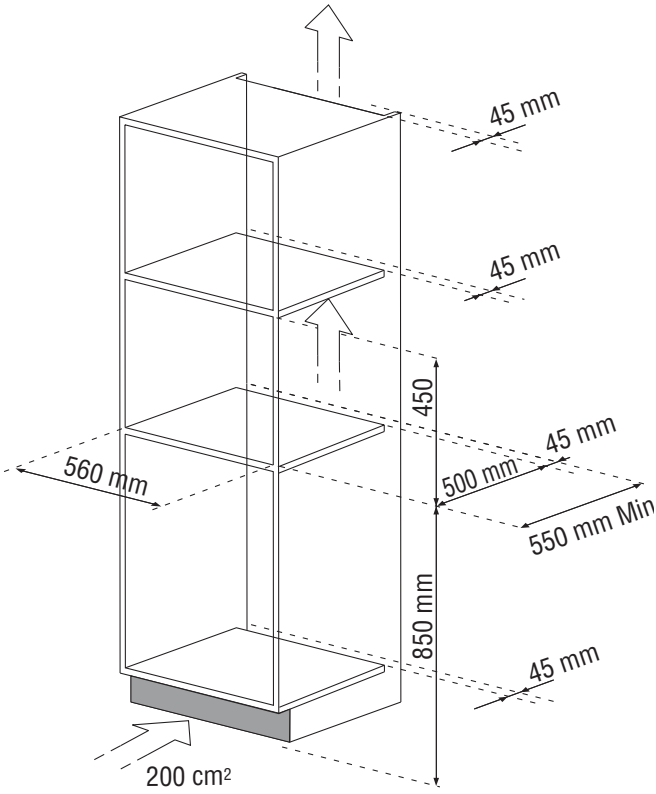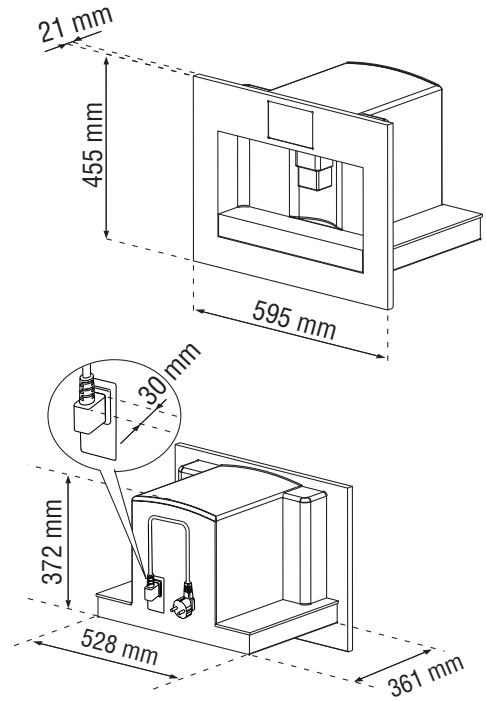


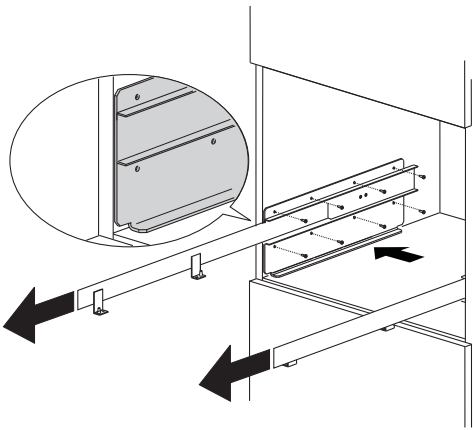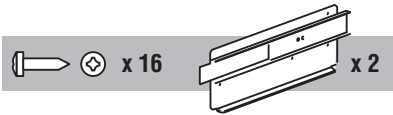

Position the rails on the sides of the cabinet as shown in the figure. Fix with the screws supplied, then extract them completely. If the coffee maker is installed over a warmer drawer, use the top surface of this as a reference to position the rails. In this case, there will be no surface to rest the rails on.

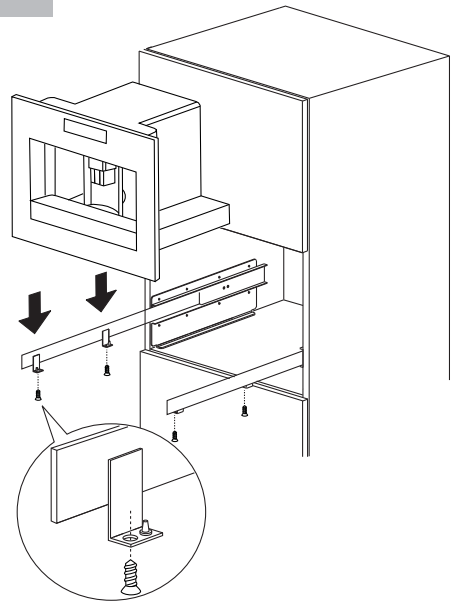

Position the appliance on the rails, making sure the pins are correctly inserted in the housings, then fix it with the screws supplied.

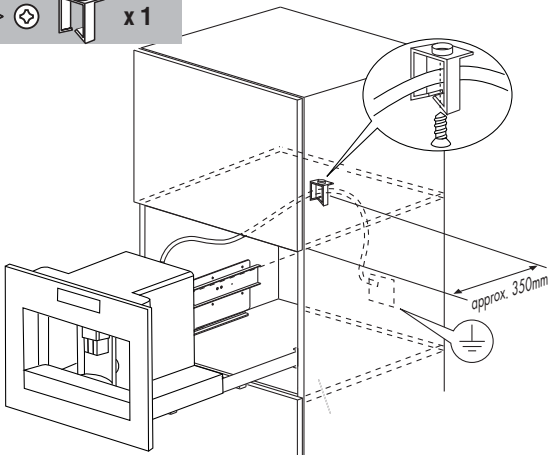


Fix the power cable with the clip to avoid it tangling when the appliance is inserted or extracted.

The power cable must be long enough to allow the appliance to be extracted from the cabinet to fill the coffee beans container.

**The appliance must be earthed in compliance with legislation. Electrical connections must be performed by a qualified electrician in compliance with the manufacturer's instructions and legislation in force in the country of installation.**


The electrical socket must be accessible.

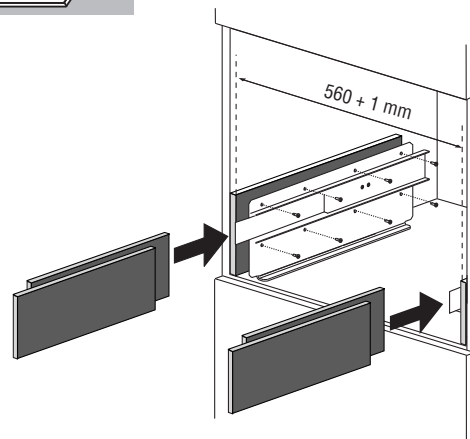


If necessary, correct alignment of the appliance by positioning the spacers supplied under or at the sides of the support.

## USING THE APPLIANCE FOR THE FIRST TIME

- Coffee has been used to factory test the appliance and it is therefore completely normal for there to be traces of coffee in the mill. The machine is, however, guaranteed to be new.
  - You should customise water hardness as soon as possible following the instructions in the "Setting water hardness" section.
- Connect the appliance to the mains electricity supply and press the main switch (A19).
  - Set the required language.  
To set the language, use the  $\triangle\nabla$  icons (C8 e C11) to choose the required language (fig. 2). When the message "PRESS OK TO CHOOSE ENGLISH" is displayed, press the OK icon (C12) (fig. 3) for 3 seconds until "ENGLISH INSTALLED" is displayed. If you set the wrong language, follow the instructions in the "Setting the language" section. If your language is not available, select one from those displayed. The instructions refer to the English version. Then follow the instructions displayed:  
Then follow the instructions displayed:
  - After 5 seconds, the appliance displays "FILL TANK". Extract the water tank (fig. 4), rinse and fill with fresh water without exceeding the MAX line. Replace and push as far as it will go. A water softener filter can be installed in the tank.
  - Place a cup under the hot water spout (fig. 5). (If the hot water spout is not inserted, the appliance displays "INSERT WATER SPOUT". Attach it as shown in figure 4. Press the OK icon (C12) (fig. 3) and after a few seconds a little water comes out of the spout. (Delivery stops automatically).
  - The machine now displays "TURNING OFF PLEASE WAIT" and goes off.
  - Extract the appliance by pulling it out using the handles (fig. 7). Open the lid and fill the container with coffee beans, then close the lid and push the appliance in.  
The coffee maker is now ready for normal use.

 **Important!** Never introduce pre-ground coffee, freeze dried coffee, caramelised beans or anything else which could damage the appliance.

 **N.B.!** When using the appliance for the first time, you need to make 4-5 cups of coffee and 4-5 cappuccinos before the appliance gives satisfactory results.


 **N.B.!** Each time you turn the coffee maker on by the main switch (A19), it performs a SELF-DIAGNOSIS cycle and then goes off. To turn it on again, press the On/stand-by button (A21) (fig. 1)

### Installing the filter


Some models are fitted with a water softener filter to improve the quality of the water used and extend the working life of the appliance.

To install, proceed as follows:

- Remove the filter (B9) from the packaging;
- Slide the date indicator pointer (see fig. 30) until the months of use are displayed.


 **N.B.!** The filter lasts about two months if the appliance is used normally. If the coffee maker is left unused with the filter installed, it will last a maximum of three weeks.

- Fill the tank with a little water up to the level shown in the figure:

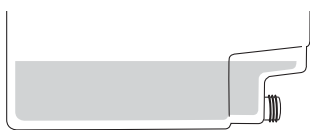


- Insert the filter in the water tank and press it until it touches the bottom of the tank (see fig. 30);
- Fill the water tank and place it in the coffee maker, then insert the hot water spout (B7) (fig. 5).

- Position a container under the spout (fig. 6) (min. capacity: 100 ml).

 **N.B.!** When you install the filter, you must notify the appliance of its presence.

- Press the M icon (C10) (fig. 15) to enter the menu.
- Press the  $\triangle\nabla$  icons (C8) and (C11) until "INSTALL FILTER" is displayed
- Press the OK icon (C11).
- The message "INSTALL FILTER PLEASE CONFIRM" is displayed.
- Press the OK icon (C12) to confirm the selection (or ESC (B9) to cancel). "HOT WATER PRESS OK" is displayed.
- Press the OK icon (C12) again. The appliance begins delivering hot water and the message "PLEASE WAIT..." is displayed.  
When delivery stops, the appliance automatically displays the basic modes set again.

 **N.B.!** The appliance may request the operation to be repeated a number of times until the air is completely eliminated from the hydraulic circuit.

### Replacing the filter ("Filter reset")


When "REPLACE FILTER" is displayed or after 2 months of use (see date indicator), the filter must be replaced:

- Remove the exhausted filter.
- Remove the new filter from the packaging.
- Slide the pointer of the date indicator (see fig. 30) until the months of use are displayed (the filter lasts about 2 months);
- Insert the filter in the water tank and press it until it touches the bottom of the tank (see fig. 30);
- Fill the water tank and place it in the coffee maker, then insert the hot water spout (B7) (fig. 6).
- Position a container under the spout (min. capacity: 100 ml).
- Press the M icon (C10) to enter the menu.
- Press the  $\triangle\nabla$  icons (C8) and (C11) until "FILTER RESET" is displayed;
- Press the OK icon (C12).
- The message "FILTER RESET CONFIRM" is displayed.
- Press the OK icon (C12) to confirm the selection (or ESC (C9) to cancel). "HOT WATER PRESS OK" is displayed.
- Press the OK icon (C12) again. The appliance begins delivering hot water and the message "PLEASE WAIT..." is displayed.  
When delivery stops, the appliance automatically displays the basic modes set again.

### Removing the filter

To use the appliance without a filter, you must remove it and notify the appliance of its removal as follows:


- Press the M icon (C10) to enter the menu.
- Press the  $\triangle\nabla$  icons (C8) and (C11) until "INSTALL FILTER\*" is displayed.
- Press the OK icon (C12). The message "INSTALL FILTER\* CONFIRM" is displayed.
- Press the M icon (C10)
- The message "INSTALL FILTER" is displayed.
- Press the M icon (C10) or ESC icon (B9) to exit the menu.  
The appliance automatically displays the basic modes set again.

 **N.B.!** Use the filters recommended by the manufacturer only. Use of unsuitable filters could damage the appliance.

## TURNING ON AND HEATING UP

Each time the appliance is turned on, it performs an automatic preheat and rinse cycle which cannot be interrupted.

The appliance is ready for use only after completion of this cycle.

 **Danger of burns!** During rinsing, a little hot water flows from the coffee spouts.

To turn the appliance on, press the On/stand-by button (A21) (fig. 1). The

message "HEATING UP... PLEASE WAIT" is displayed. When heating is complete, the message changes to "RINSING"; The appliance is at temperature when the message "MEDIUM CUP NORMAL TASTE" is displayed. If no icon is pressed within about 2 minutes, the time (if set, see the "Setting the clock" section) is displayed. If the time has not been set, the appliance displays the last functions set. When any icon is pressed, "MEDIUM CUP NORMAL TASTE" is displayed again. The appliance is ready to make coffee again.

## MAKING COFFEE USING COFFEE BEANS

- The appliance is preset to make coffee with a normal taste. You can also choose coffee with an extra-mild, mild, standard, strong or extra-strong taste. There is also a pre-ground coffee option. To choose the required taste, press more times the ☕ icon (C7) (fig. 8). The required coffee taste is displayed.
- Place 1 cup under the spouts to make 1 coffee (fig. 9) or 2 cups for 2 coffees (fig. 9). Lower the spouts as near as possible to the cup for a creamier coffee (fig. 10).
- Press the ☕ icon (C4) (fig. 11) to select the type of coffee: espresso, small cup, medium cup, large cup, mug. Press the 1 icon (C2) (fig. 12) if you want to make a coffee and the 2 icon (C3) (fig. 13) if you want to make 2 coffees. To change the quantity of coffee the appliance delivers automatically into the cup, proceed as described in the following section. The appliance now grinds the beans and starts delivering the coffee into the cup. Once the set amount of coffee has been delivered, the machine stops delivery automatically and expels the exhausted waste coffee into the waste coffee container.
- After a few seconds, the appliance is ready for use again.
- To turn the appliance off, press the On/stand-by button (A21) (fig. 1). (Before going off, the appliance performs an automatic rinse cycle. Take care to avoid scalds).

NOTE 1: If the coffee is delivered a drop at a time or not at all, see the "Adjusting the coffee mill" section.

NOTE 2: If the coffee is delivered too fast and the cream is not satisfactory, see the "Adjusting the coffee mill" section.

NOTE 3: Tips for a hotter coffee:

- When you turn the appliance on, if you want to make a short coffee (less than 60 cc), rinse the cups with hot water to preheat the cups.
- If more than 2/3 minutes have passed since the last coffee was made, before requesting another coffee, you must preheat the infuser by pressing the ☕ button (C5). Deliver the water into the underlying drip tray or alternatively use this water to fill (and then empty) the cup to be used for the coffee, so as to preheat it.
- Unless preheated, do not use excessively thick cups as they will absorb too much heat.
- Preheat the cups by rinsing them with hot water.

NOTE 4: While the appliance is making coffee, delivery can be interrupted at any moment by pressing the previously selected icons (C2) 1 or 2 (C3).


NOTE 5: As soon as delivery is finished, to increase the quantity of coffee in the cup, just keep pressing the previously selected icon within 3 seconds after delivery has finished.

NOTE 6: When the appliance displays "FILL TANK", fill the tank with water or the appliance will not deliver coffee.

(It is normal for there to be a little water left in the tank).

NOTE 7: After about 14 single (or 7 double) coffees, the appliance displays "EMPTY WASTE COFFEE CONTAINER". Even if not full, the empty waste coffee container message is displayed 72 hours after the first coffee has been delivered. For the 72 hours to be calculated correctly, the machine must never be turned off with the main switch in the 0 position.

To clean, open the service door on the front of the appliance by pulling the spout (fig. 16), extract the drip tray (fig. 17) and clean.

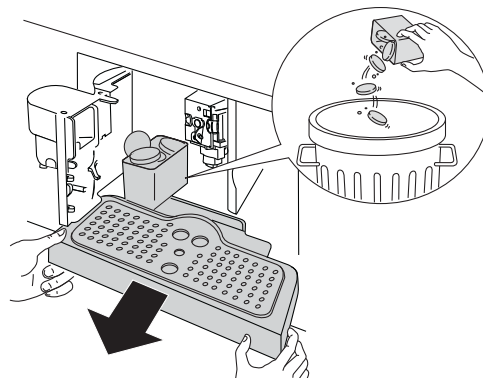

When cleaning, **always extract the drip tray completely.**

**! Important!** When extracting the drip tray, the waste coffee container **MUST** always be emptied. If this is not done, the machine may be clogged.

NOTE 8: Never extract the water tank while the machine is delivering coffee.

If it is removed, it will not be possible to make the coffee and the appliance will display "GROUND TOO FINE ADJUST MILL and INSERT WATER SPOUT AND PRESS OK".

To use the appliance again, insert the hot water spout (fig. 5) if not already in position, then press the OK icon (C12) and deliver water from the spout for a few seconds.

**i N.B.:** The coffee maker may request the operation to be repeated a number of times until the air is completely eliminated from the hydraulic circuit.

**i N.B.:** if this operation is not performed correctly or if the machine is turned off, the basic modes may be displayed, although the problem is in fact still present.

## CHANGING THE QUANTITY OF COFFEE IN THE CUP

The appliance is set by default to automatically make the following types of coffee:

- espresso
- small cup
- medium cup
- large cup
- mug


To change the quantity, proceed as follows:


- Press the M icon (C10) to enter the menu (fig. 15). Press the Δ▽ icons (C8) and (C11) (fig. 2) until "PROGRAM COFFEE" is displayed.
- Press the OK icon (C12). The message "PROGRAM COFFEE ESPRESSO" is displayed.
- Select the type of coffee you want to change by pressing the Δ▽ icons (C8) and (C11).
- Press the OK icon (C12) to confirm the type of coffee you want to make.
- Use the Δ▽ icons (C8) and (C11) to change the quantity of coffee. The progress bar shows the quantity of coffee selected.
- Press the OK icon (C12) again to confirm (or the ESC icon (C9) (fig. 18) to cancel the operation).
- Press the ESC icon (C9) to exit the menu.

The appliance is now reprogrammed with the new settings and is ready.

## ADJUSTING THE COFFEE MILL

The coffee mill is preset in the factory and should not require adjusting. However, if after making the first few coffees you find that delivery is either too fast or too slow (a drop at a time), this can be corrected by adjusting the grinding adjustment knob (fig. 14).

 **Important!** The grinding adjustment knob must only be turned when the coffee mill is in operation.

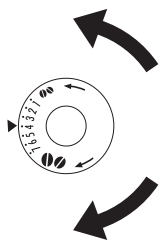

For slower delivery and creamier coffee, turn one click anticlockwise (finer pre-ground coffee).  
For faster delivery (not a drop at a time), turn one click clockwise (coarser pre-ground coffee).

## MAKING COFFEE USING PRE-GROUND COFFEE

- Press the ☉ icon (C7) (fig. 8) to select the pre-ground coffee function.
- Extract the machine by pulling it outwards using the handles (fig. 7).
- Lift the central lid, place one measure of pre-ground coffee in the funnel (fig. 19), push the appliance in then proceed as described in the section "Making coffee using coffee beans".  
N.B.: You can make just one coffee at a time by pressing the ☕ icon (C2).
- After using the machine with pre-ground coffee, to go back to making coffee using beans, deactivate the pre-ground coffee function by pressing the ☉ icon (C7).

NOTE 1: Never introduce pre-ground coffee when the machine is off or it could spread through the inside of the appliance.

NOTE 2: Never add more than 1 measure, otherwise the appliance will not make the coffee.

NOTE 3: Use the measure provided only.

NOTE 4: Introduce only pre-ground coffee for espresso coffee machines into the funnel.

NOTE 5: If more than one measure of pre-ground coffee is used and the funnel clogs, push the coffee down with a knife (fig. 21) then remove and clean the brewing unit and machine as described in the "Cleaning the brewing unit" section.

## DELIVERING HOT WATER


- Always make sure the appliance is ready.
- Make sure the hot water spout is in place (fig. 5).
- Position a container under the spout (fig. 6).
- Press the ☺ icon (C6) (fig. 20).  
The appliance displays: "HOT WATER PRESS OK".
- Press the OK icon (C12) again and hot water is delivered from the water spout into the container underneath.  
You should not deliver hot water for more than 2 minutes at a time.
- To interrupt, press the ☺ icon (C6) or the ESC icon (C9).  
The appliance stops delivery once the set quantity is reached.

## CHANGING THE QUANTITY OF HOT WATER


The machine is set by default to automatically delivery 150 ml of hot water. To change these quantities, proceed as follows:

- Place a container underneath the water spout (fig. 6).
- Press the M icon (C10) to enter the menu (fig. 15) or press the ▲▼ icons (C8) and (C11) (fig. 2) until "PROGRAM HOT WATER" is displayed.
- Press the OK icon (C12) to confirm.
- Select the required quantity of water by pressing the ▲▼ icons (C8) and (C11).  
The progress bar shows the quantity of water selected.
- Press the OK icon (C12) to confirm or the ESC icon (C9) (fig. 18) to cancel the operation.
- Press the ESC icon (C9) to exit the menu.
- The appliance is now reprogrammed with the new settings and is ready.

## MAKING CAPPUCCINO

 **N.B.:** Set the quantity of coffee you want to use to make the cappuccino in the "Program cappuccino" function in the menu.

- Select the taste of the coffee you want to use to make the cappuccino by pressing the ☉ icon (C7) (fig. 8).
- Remove the lid of the milk container.
- Fill the container with about 100 grams of milk for each cappuccino to be prepared (fig. 23). Never exceed the MAX level (corresponding to about 750 ml) marked on the jug.  
You should ideally use skimmed or semi-skimmed milk at refrigerator temperature (about 5°C).
- Make sure the intake tube is correctly inserted in the rubber washer (fig. 24) then replace the milk container lid.
- Position the frothed milk regulator (B1) between the words CAPPUCINO and CAFFELATTE printed on the milk container lid.  
The quality of froth can be adjusted by moving the frothed milk regulator towards the word CAFFELATTE for a denser froth. Moving it towards the word CAPPUCINO obtains a less dense froth.

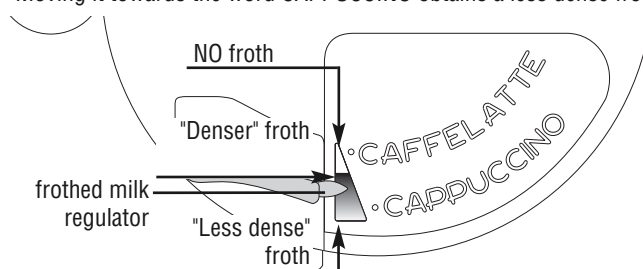

- Remove the hot water spout and attach the milk container to the nozzle (fig. 25).
- Position the milk tube as shown in fig. 26 and then place a sufficiently large cup under the coffee and milk spouts.
- Press the ☉ icon (C13). "CAPPUCCINO..." is displayed and after a few seconds, frothed milk flows out of the milk spout into the cup below. (Delivery stops automatically).
- The appliance delivers the coffee.
- The cappuccino is now ready. Sweeten to taste and, if desired, sprinkle the froth with a little cocoa powder.

NOTE 1: While making cappuccino, the flow of frothed milk or coffee can be interrupted by pressing the ☉ icon (C13).

NOTE 2: If the milk in the container finishes while delivering frothed milk, remove the container and add milk. Then re-attach it and press the ☉ icon (C13) to request cappuccino again.

NOTE 3: To ensure the complete cleanliness and hygiene of the milk frother, always clean the circuits in the milk container lid after making cappuccino. "PRESS CLEAN!" flashes on the display.

- **Place a recipient under the milk spout (fig. 26).**
- Press the CLEAN button on the lid (B3) and hold down for at least 8 seconds (fig. 26) to start the cleaning function. The appliance displays the message "CLEANING" above a progressive bar.  
You should not release the CLEAN button until the bar is complete indicating that cleaning is concluded.  
When the CLEAN button is released, the function stops.  
After cleaning, remove the milk container and place in the refrigerator. The milk should not be left out of the refrigerator for more than 15 minutes.

NOTE 4: To change the quantity of coffee or frothed milk the appliance delivers automatically into the cup, proceed as described in the section "Changing the quantity of milk and coffee for cappuccino".

## CHANGING THE QUANTITY OF MILK AND COFFEE FOR CAPPUCCINO

The appliance is set by default to automatically deliver a standard cappuccino.

To change these quantities, proceed as follows:

## Changing the quantity of milk

- Fill the container with milk up to the maximum level indicated on the container.
- Press the M icon (C10) to enter the menu (fig. 15), then press the  $\triangle\nabla$  icons (C8) and (C11) (fig. 2) until "PROGRAM CAPPUCCINO" is displayed.
- Press the OK icon (C12) to confirm. "PROGRAM MILK" is displayed.
- Press the OK icon (C12) again.
- Select the quantity of milk required by pressing the  $\triangle\nabla$  icons (C8) and (C11). The progress bar shows the quantity of milk selected.
- Press the OK icon (C12) to confirm (or the ESC icon (C9) (fig. 18) to cancel the operation).
- Press the ESC icon (C9) to exit the menu.

## Changing the quantity of coffee

- Press the M icon (C10) to enter the menu (fig. 15) or press the  $\triangle\nabla$  icons (C8) and (C11) (fig. 2) until "PROGRAM CAPPUCCINO" is displayed.
- Press the OK icon (C12) to confirm then the  $\triangle\nabla$  icons (C8) and (C11) (fig. 2) until "COFFEE FOR CAPPUCC." is displayed.
- Press the OK icon (C12) again.
- Select the quantity of coffee required by pressing the  $\triangle\nabla$  icons (C8) and (C11). The progress bar shows the quantity of coffee selected.
- Press the OK icon (C12) to confirm (or the ESC icon (C9) (fig. 18) to cancel the operation).
- Press the ESC icon (C9) to exit the menu.

## CLEANING AND MAINTENANCE



**Danger!** Before performing any cleaning operations, the machine must be turned off by pressing the main switch (A19) and unplugged from the mains power supply. Never immerse the coffee maker in water.

Do not use solvents or abrasive detergents to clean the coffee maker. A soft damp cloth will suffice. None of the components of the appliance can be washed in a dishwasher with the exception of the milk container.

### Cleaning the coffee maker

The following parts of the machine must be cleaned regularly:

- Coffee grounds container (A4).
- Drip tray (A11).
- Water tank (A9).
- Coffee spouts (A10).
- Pre-ground coffee funnel (A17).
- Inside of the machine, accessible after opening the service door (A2).
- Infuser (A5).

### Cleaning the coffee grounds container

When "EMPTY GROUNDS CONTAINER" is displayed, the grounds container must be emptied and cleaned.

Until the grounds container has been cleaned, the appliance continues to display the message and coffee cannot be made.

To clean:

- Open the service door (A2) on the front of the appliance (fig. 16), extract the drip tray (A11) (fig. 17), empty and clean.
- Empty the grounds container and clean thoroughly to remove all residues left on the bottom.



**Important!** When removing the drip tray, the grounds container must be emptied, even if it is not completely full. If this is not done, when you make the next coffees, the grounds container may fill up more than expected and clog the machine.

### Cleaning the drip tray



**Important!** If the drip tray is not emptied regularly, the water could overflow from the edge and seep inside or around the coffee maker. This

could damage the appliance and cabinet.

The drip tray is fitted with a level indicator (red) showing the level of water it contains (fig. 28). Before the indicator protrudes from the cup tray, the drip tray must be emptied and cleaned.

To remove the tray:

1. Open the service door (A2) (fig. 16).
2. Remove the drip tray (A11) and the grounds container (A4) (fig. 17).
3. Empty the drip tray and grounds container and wash them.
4. Replace the drip tray complete with grounds container.
5. Close the service door.

### Cleaning the water tank

1. Clean the water tank (A9) regularly (about once a month) with a damp cloth and a little mild washing up liquid.
2. Clean to remove all washing up liquid residues, then rinse the water tank thoroughly.

### Cleaning the spouts

1. Clean the coffee spout nozzles (A10) periodically using a sponge or cloth (fig. 29).
2. Check regularly that the holes in the coffee spout are not blocked. If necessary, remove coffee deposits with a toothpick (fig. 27).

### Cleaning the pre-ground coffee funnel

- Check regularly (about once a month) that the pre-ground coffee funnel (A17) is not blocked. If necessary, remove coffee deposits with a knife (fig. 21).

### Cleaning the inside of the coffee maker

1. Check regularly (about once a week) that the inside of the appliance is not dirty. If necessary, remove coffee deposits with a knife and a sponge.
2. Remove the residues with a vacuum cleaner (fig. 31).

### Cleaning the infuser

The infuser (A5) must be cleaned at least once a month.




**Important!** The infuser (A5) must not be removed when the appliance is on. Do not attempt to use force to remove the infuser as this could damage the coffee maker.

1. Make sure the machine is correctly turned off (see "Turning the appliance off").
2. Open the service door (A2) (fig. 16).
3. Remove the drip tray (A11) and grounds container (fig. 17).
4. Press the two red release buttons inwards and at the same time pull the infuser outwards (fig. 32).




**Important!** Do not use washing up liquid to clean the infuser. It would remove the lubricant applied to the inside of the piston, causing the infuser to seize up and become unusable.

5. Soak the infuser in water for about 5 minutes, then rinse under the tap.
6. After cleaning, replace the infuser (A5) by sliding it onto the internal support and pin at the bottom,

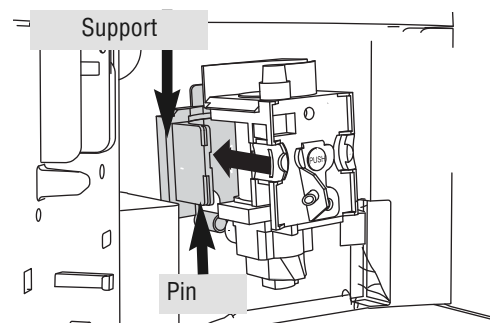


then push the PUSH symbol fully in until it clicks into place.

**!** *N.B.!* If the infuser is difficult to insert, you must first adapt it to the right dimensions by pressing it forcefully from the bottom and top as shown in the figure.

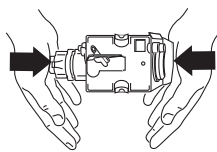


7. Once inserted, make sure the two red buttons have snapped out.
8. Replace the drip tray (A11) and grounds container.
9. Close the service door (A2).

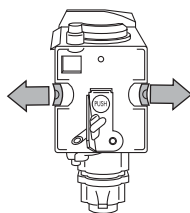


## Cleaning the milk container

**!** *Important!* Always clean the tubes inside the milk container (B) when you prepare milk. If there is still milk in the container, do not leave it out of the refrigerator for longer than strictly necessary. Clean the container each time you prepare milk as described in Note 3 in the section "Making cappuccino".

1. Turn the milk container lid clockwise then remove it.
2. Remove the milk spout and intake tube.

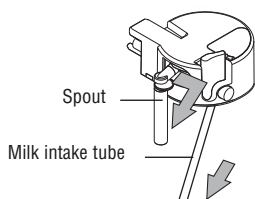

3. Remove the frothed milk regulator by pulling it outwards.
4. Wash all the components thoroughly with hot water and mild washing-up liquid. Make sure there are no milk residues left inside the holes and the groove on the fine end of the frothed milk regulator.
5. Check that the intake tube and spout are not clogged with milk residues.
6. Replace the frothed milk regulator, milk spout and intake tube.
7. Replace the milk container lid.

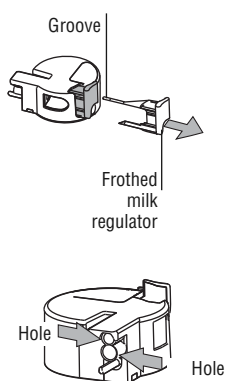

## CHANGING AND SETTING MENU PARAMETERS

When the appliance is ready, you can use the internal menu to modify the following parameters and functions:

- Choose language
- Shut-off time
- Set clock
- Start time
- Auto-start
- Temperature
- Water hardness
- Program coffee

- Program cappuccino
- Program water
- Descale
- Reset to default
- Statistics
- Install filter
- Reset filter
- Buzzer

## Setting the language

To change the language on the display, proceed as follows:

- Press the M icon (C10) to enter the menu. "CHOOSE LANGUAGE" is displayed.
- Press the OK icon (C12).
- Press the  $\triangle\nabla$  icons (C8) and (C11) until the required language is displayed.
- Press the OK icon (C12) to confirm.
- Press the ESC icon (C9) to exit the menu.

**i** *N.B.!* If you choose the wrong language, you can access the menu directly to modify the parameter.

- Press the M icon button (C10) for at least 7 seconds until the appliance displays the various languages.
- Choose the required language as described in the section "Using the appliance for the first time".

## Changing the length of time the appliance remains on

The appliance is set by default to go off automatically 30 minutes after the last coffee has been made. To change this interval (max. 120 min), proceed as follows:


- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "SHUT-OFF TIME" is displayed.
- Press the OK icon (C12) to confirm.
- Press the  $\triangle\nabla$  icons (C8) and (C11) to set the time after which the appliance will go off (after 1/2 hour, 1 hour, 2 hours).
- Press the OK icon (C12) to confirm.
- Press the ESC icon (C9) to exit.

## Setting the clock

- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "SET CLOCK" is displayed.
- Press the OK icon (C12).
- Use the  $\triangle\nabla$  icons (C8) and (C11) to set the hour, then press the OK icon (C12) to confirm.
- Use the  $\triangle\nabla$  icons (C8) and (C11) to set the minutes, then press the OK icon (C12) to confirm.
- Press the ESC icon (C9) to exit the menu.

## Setting auto-start time

This function programmes the time the machine will come on automatically.

- Make sure the clock on the appliance has been set.
- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "START TIME" is displayed.
- Press the OK icon (C12).
- Use the  $\triangle\nabla$  icons (C8) and (C11) to set the auto-start time, then press the OK icon (B9) to confirm.
- Use the  $\triangle\nabla$  icons (C8) and (C11) to set the minutes, then press the OK icon (C12) to confirm.
- Press the  $\triangle\nabla$  icons (C8) and (C11) to activate the auto-start function until "AUTO START" is displayed.
- Press the OK icon (C12) to confirm. The  symbol appears on the display.
- Press the ESC icon (C9) to exit the menu.
- To deactivate the automatic start-up function, press the  $\triangle\nabla$  (C8) and (C11) icons until the appliance displays the message



"AUTO START-UP".

- Press the OK (C12) icon. "CONFIRM" will appear on the display.
- Press the ESC icon (C9) to deactivate and the  symbol will disappear.

## Changing coffee temperature

To change coffee temperature, proceed as follows:

- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "TEMPERATURE" is displayed.
- Press the OK icon (C12).
- Press the  $\triangle\nabla$  icons (C8) and (C11) to select the required coffee temperature from low, medium and high.
- Press the OK button (C12) to confirm the temperature selected.
- Press the ESC icon (C9) to exit the menu.

## Setting water hardness

The descale message is displayed after the appliance has been operated for a factory set period of time calculated on the basis of the maximum quantity of limescale which may be contained in the water used.

The operating period can be extended if required, making descaling less frequent by programming the machine on the basis of the real lime content in the water used.

Proceed as follows:

- remove the "Total Hardness Test" strip (attached to page 2) from its packaging then dip it fully in the water for a few seconds, Then remove and wait about 30 seconds (until it changes colour and forms red squares).
- turn the appliance on by pressing the On/stand-by button (A21).
- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "WATER HARDNESS" is displayed.
- Press the OK icon (C12).
- Press the  $\triangle\nabla$  icons (C8) and (C11) until the number coincides with the number of red squares on the test strip (for example, if there are 3 red squares on the test strip, select the message "WATER HARDNESS 3").
- Press the OK icon (C12) to confirm.  
The coffee maker is now programmed to provide the descale warning when actually necessary.

## Programming coffee

For instructions on programming coffee, see the "CHANGING THE QUANTITY OF COFFEE IN THE CUP" section.

## Programming cappuccino

For instructions on programming cappuccino, see the "CHANGING THE QUANTITY OF MILK AND COFFEE FOR CAPPUCCINO" section.

## Programming water

For instructions, see the "CHANGING THE QUANTITY OF HOT WATER" section.

## Descaling



**Important!** Descaler contains acids. Respect the safety warnings provided by the manufacturer and given on the descaler pack.



**N.B.!** Use the descaler recommended by the manufacturer only. Use of other descalers invalidates the guarantee. Failure to descale the appliance as described also invalidates the guarantee.



**Important!** Before descaling, make sure the water softener filter has been removed.

When "PLEASE DESCALE !" is displayed, the machine requires descaling.

Proceed as follows:

- Make sure the machine is ready.
- Attach the hot water spout (B7) to the nozzle (A8).
- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8)

and (C11) until "DESCALE" is displayed.

- Press the OK icon (C12) and the appliance displays "DESCALE PLEASE CONFIRM".
- Press the OK icon (C12). The message "ADD DESCALER PLEASE CONFIRM" is displayed.
- Empty the tank of water, pour the contents of the descaler bottle into the tank respecting the instructions given on the descaler pack, then add water up to the MAX level marked on the water tank. Position a container with a capacity of about 2 litres under the hot water spout.
- Press the OK icon (C12). Descaler flows out of the hot water spout into the container below.  
The appliance displays: "DESCALING".
- The descale programme automatically performs a series of deliveries and pauses.
- After about 30 minutes "DESCALE COMPLETE PLEASE CONFIRM" is displayed.
- Press the OK icon (C12) and "FILL TANK" is displayed. Fill the tank again and press the OK icon (C12). "RINSING PLEASE CONFIRM" is displayed.
- Empty the water tank, rinse to eliminate descaler residues, then fill with clean water.
- Replace the tank."RINSING PLEASE CONFIRM" is displayed.
- Press the OK icon (C12) again. Hot water flows out of the spout into the container below and "RINSING" is displayed.
- Wait until "RINSING COMPLETE PLEASE CONFIRM" is displayed.
- Press the OK icon (C12). "DESCALE COMPLETE" and "FILL TANK" is displayed. Fill the tank again with clean water.
- The descale programme is now terminated and the appliance is ready to make coffee again.  
NOTE: If descaling is interrupted before completion, the process must be begun again from the beginning.



**Important!** FAILURE TO DESCALE THE APPLIANCE REGULARLY INVALIDATES THE GUARANTEE.

## Resetting default values (reset)

If you change the original values, the default values can be reset as follows:

- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "RESET TO DEFAULT" is displayed.
- Press the OK icon (C12) and the appliance displays "RESET TO DEFAULT PLEASE CONFIRM".
- Press the OK button (C12) to reset the default values.

## Statistics

This displays statistics relating to the machine.

To display, proceed as follows:

- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "STATISTICS" is displayed.
- Press the OK icon (C12).
- Press the  $\triangle\nabla$  icons (C8) and (C11) to verify:
  - How many coffees and cappuccinos have been made.
  - How many times the machine has been descaled.
  - The total number of litres of water delivered.
- Press the ESC icon (C9) once to exit the menu.

## Buzzer

This activates or deactivates the buzzer emitted by the machine each time an icon is pressed or an accessory is inserted/removed.



**N.B.!** The buzzer is active by default.

- Press the M icon (C10) to enter the menu and then the  $\triangle\nabla$  icons (C8) and (C11) until "BUZZER" is displayed.
- Press the OK icon (C12). "BUZZER PLEASE CONFIRM" is displayed.
- Press the M icon (C10) to disable or the OK icon (C12) to enable the buzzer.
- Press the ESC icon (C9) to exit the menu.

## Water filter

For instructions on the water softener filter, see the section "INSTALLING THE FILTER".

## TURNING THE APPLIANCE OFF

Each time the appliance is turned off, it performs an automatic rinse cycle which cannot be interrupted.



**Danger of burns!** During rinsing, a little hot water flows from the coffee spouts.

Avoid contact with splashes of water.

To turn the appliance off, press the On/stand-by button (A21).



**N.B.!** If the appliance is not used for an extended period, place the main switch (A19) on the back of the appliance in the **0** position.

## TECHNICAL SPECIFICATION

Voltage: 220-240 V~ 50/60 Hz max. 10A

Absorbed power: 1350 W

Pressure: 15 bars

Water tank capacity: 1,7 litri

Size LxHxD: 560x 450x550 mm

Weight: 26 kg



The appliance complies with the following EC directives:

- Low Voltage Directive 2006/95/EC and subsequent amendments;
- EMC Directive 2004/108/EC and subsequent amendments
- EC Regulation 1275/2008 for standby

Materials and accessories coming into contact with food conform to European regulation (EC) no. 1935/2004.

## DISPOSAL



Electrical appliances must not be disposed of as household waste. Appliances with this symbol are covered by European Directive 2002/96/EC.

All unused electric and electronic appliances must be disposed of separately from household waste by taking them to special state authorised centres.

Disposing of the unused appliance correctly avoids damage to the environment and a risk to health.

For more information on disposing of the unused appliance, contact the local administration, the waste disposal department or the shop where the appliance was bought.

## DISPLAYED MESSAGES

DISPLAYED MESSAGE	POSSIBLE CAUSE	REMEDY
FILL TANK	<ul style="list-style-type: none"> <li>The water tank is empty or positioned incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>Fill the tank with water and/or insert it correctly, pushing it as far as it will go.</li> </ul>
GROUND TOO FINE ADJUST MILL <i>(alternating with)</i> INSERT WATER SPOUT AND PRESS OK	<ul style="list-style-type: none"> <li>The grinding is too fine and the coffee is delivered too slowly.</li> <li>The machine cannot make coffee as there is air in the hydraulic circuit.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the grinding adjustment knob one click clockwise towards "7".</li> <li>Insert the hot water spout, press the OK button (C12) and deliver water from the spout for a few seconds.</li> </ul>
INSERT WATER SPOUT	<ul style="list-style-type: none"> <li>The hot water spout is not inserted or is inserted incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the hot water spout as far as it will go.</li> </ul>
EMPTY WASTE COFFEE CONTAINER	<ul style="list-style-type: none"> <li>The waste coffee container (A4) is too full or more than 3 days have passed since you last made coffee (this guarantees correct hygiene of the machine).</li> </ul>	<ul style="list-style-type: none"> <li>Empty the waste coffee container and clean, then replace. Important: when removing the drip tray, the waste coffee container <b>MUST</b> be emptied, even if it is not completely full. If this is not done, when you make the next coffees, the waste coffee container may fill up more than expected and clog the machine.</li> </ul>
INSERT WASTE COFFEE CONTAINER	<ul style="list-style-type: none"> <li>After cleaning, the waste coffee container has not been replaced.</li> </ul>	<ul style="list-style-type: none"> <li>Open the service door and insert the waste coffee container.</li> </ul>
INSERT MILK CONTAINER	<ul style="list-style-type: none"> <li>The milk container is not inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the milk container as far as it will go.</li> </ul>
ADD PRE-GROUND COFFEE	<ul style="list-style-type: none"> <li>The "pre-ground coffee" function has been selected without placing any pre-ground coffee in the funnel.</li> <li>The funnel (A17) is blocked.</li> </ul>	<ul style="list-style-type: none"> <li>Extract the appliance and place pre-ground coffee in the funnel.</li> <li>Empty the funnel with the help of a knife as described in the section "Cleaning the pre-ground coffee funnel".</li> </ul>
PLEASE DESCALE! <i>(alternating with)</i> MEDIUM CUP NORMAL TASTE	<ul style="list-style-type: none"> <li>The machine must be descaled.</li> </ul>	<ul style="list-style-type: none"> <li>The descaling procedure described in the "Descaling" section needs to be performed as soon as possible.</li> </ul>
LESS COFFEE	<ul style="list-style-type: none"> <li>Too much coffee has been used.</li> </ul>	<ul style="list-style-type: none"> <li>Select a milder taste or reduce the quantity of pre-ground coffee, then make the coffee again.</li> </ul>
FILL BEAN CONTAINER	<ul style="list-style-type: none"> <li>The coffee beans have run out.</li> </ul>	<ul style="list-style-type: none"> <li>Fill bean container</li> </ul>
INSERT BREWING UNIT	<ul style="list-style-type: none"> <li>The brewing unit has not been replaced after cleaning.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the brewing unit as described in the section "Cleaning the brewing unit".</li> </ul>
CLOSE DOOR	<ul style="list-style-type: none"> <li>The service door is open</li> </ul>	<ul style="list-style-type: none"> <li>Close the service door.</li> </ul>
GENERAL ALARM!	<ul style="list-style-type: none"> <li>The inside of the appliance is very dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the inside of the appliance thoroughly, as described in the section "Cleaning and maintenance". If the message is still displayed after cleaning, contact a customer services.</li> </ul>
REPLACE FILTER!	<ul style="list-style-type: none"> <li>The water softener filter (B9) must be replaced.</li> </ul>	<ul style="list-style-type: none"> <li>You must immediately replace the filter following the instructions in the section "Replacing the filter".</li> </ul>

## TROUBLESHOOTING

Below is a list of some of the possible malfunctions.

If the problem cannot be resolved as described, contact Customer Services.

PROBLEM	POSSIBLE CAUSE	REMEDY
The coffee is not hot	<ul style="list-style-type: none"> <li>The cups were not preheated.</li> <li>The brewing unit has cooled down because 2/3 minutes have elapsed since the last coffee was made.</li> <li>The temperature set is too low.</li> </ul>	<ul style="list-style-type: none"> <li>Warm the cups by rinsing them with hot water.</li> <li>Before making coffee, heat the infuser by pressing the ☺ icon (C5).</li> <li>Change the set temperature (see paragraph "Changing coffee temperature").</li> </ul>
The coffee is not creamy enough	<ul style="list-style-type: none"> <li>The coffee is ground too coarsely.</li> <li>Wrong type of coffee</li> </ul>	<ul style="list-style-type: none"> <li>Turn the grinding adjustment knob one click anticlockwise towards "1" while the coffee mill is in operation (fig. 14).</li> <li>Use a type of coffee for espresso coffee makers.</li> </ul>
The coffee is delivered too slowly or a drop at a time.	<ul style="list-style-type: none"> <li>The coffee is ground too finely.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the grinding adjustment knob one click clockwise towards "7" while the coffee mill is in operation (fig. 14). Continue one click at a time until coffee delivery is satisfactory. The effect is only visible after delivering two coffees.</li> </ul>
The coffee is delivered too quickly.	<ul style="list-style-type: none"> <li>The coffee is ground too coarsely.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the grinding adjustment knob one click anticlockwise towards "1" while the coffee mill is in operation (fig. 14). Avoid turning the grinding adjustment knob excessively otherwise when you select 2 cups, the coffee may be delivered a drop at a time. The effect is only visible after delivering two coffees.</li> </ul>
Coffee does not come out of one of the spouts.	<ul style="list-style-type: none"> <li>The spouts are blocked</li> </ul>	<ul style="list-style-type: none"> <li>Clean the spouts with a toothpick (fig. 27).</li> </ul>
The coffee does not come out of the spouts, but from around the service door (A2).	<ul style="list-style-type: none"> <li>The holes in the spouts are clogged with dry coffee dust.</li> <li>The coffee guide (A3) inside the service door is blocked and cannot swing.</li> </ul>	<ul style="list-style-type: none"> <li>If necessary, remove coffee deposits with a toothpick, sponge or stiff bristled kitchen brush (fig. 27-29).</li> <li>Thoroughly clean the coffee guide (A3), particularly near the hinges.</li> </ul>
Water comes out of the spouts instead of coffee	<ul style="list-style-type: none"> <li>The pre-ground coffee may be blocked in the funnel (A17).</li> </ul>	<ul style="list-style-type: none"> <li>Clean the funnel (A17) with a wooden or plastic fork, clean the inside of the machine.</li> </ul>
The milk does not come out of the milk spout (B5).	<ul style="list-style-type: none"> <li>The intake tube is not inserted or is inserted incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the intake tube (B4) in the rubber washer in the milk container lid (fig. 24).</li> </ul>
The milk is not well frothed.	<ul style="list-style-type: none"> <li>The milk container lid is dirty.</li> <li>The frothed milk regulator is not positioned correctly.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the milk container lid as described in the section "Cleaning the milk container".</li> <li>Adjust following the instructions in the section "Making cappuccino".</li> </ul>
The milk contains bubbles or squirts out of the milk spout.	<ul style="list-style-type: none"> <li>The milk is not cold enough or is not semi-skimmed.</li> <li>The frothed milk regulator is incorrectly adjusted.</li> <li>The milk container lid is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>You should ideally use skimmed or semi-skimmed milk at refrigerator temperature (about 5°C). If the result is still disappointing, try another brand of milk.</li> <li>Move the frothed milk regulator slightly towards the word "CAFFELATTE" (see section "Making cappuccino").</li> <li>Clean the milk container lid as described in the section "Cleaning the milk container".</li> </ul>

## RECIPES

---

### Coffee punch

*Ingredients (serves 6):*

1/2 l of hot coffee  
1/2 l of white Port  
1/2 l of rum  
100 g of candied brown sugar

*Method:*

Pour the coffee into a pot, add the rum and the Port and heat until it reaches boiling point. Gradually add the candied sugar, tasting now and then until sufficiently sweet. When the sugar has dissolved serve in traditional, short stemmed glasses.

### Emperor's coffee

*Ingredients (serves 3):*

3 espresso coffees  
3 egg yolks  
3 teaspoons of sugar  
3 dl of milk  
2 small glasses of brandy

*Method:*

Beat the egg yolks with the sugar and the brandy.

Add hot milk and hot coffee.

RECIPE TIP: lightly whip the milk and add slowly at the very last ingredient.

Best served accompanied by a chocolate cake.

### Danish coffee

*Ingredients:*

6 eggs  
grated rind of one lemon  
100 g of sugar  
3/4 l strong, cold coffee  
1 large glass of brandy

*Method:*

Beat the eggs and the lemon rind, and then add the sugar a little at a time until the eggs become light and airy. Slowly add the coffee and the brandy, stirring constantly. Serve in chilled teacups or "Ballon" glasses.

### Irish coffee

*Ingredients (serves 3):*

2 spoons of sugar  
1 spoon of water  
9 teaspoons of whipping cream  
6 spoon of Irish Whisky  
4 cups of hot coffee

*Method:*

Boil the water and the sugar for approximately one minute then add to the Whiskey and the hot coffee. Mix and pour into stem glasses. Carefully pour the cream onto the coffee (3 teaspoons per glass).

RECIPE TIP: lightly whip the cream so that it stays on top of the coffee.

Grand Marnier or Calvados can also be added.

### Coffee sorbet

*Ingredients (serves 4):*

200 g of granulated sugar  
2 dl of espresso coffee

*Method:*

Combine 1/2 l of water and the sugar to make a syrup and simmer for a few minutes; allow it to cool then mix in the coffee. Filter as soon as a smooth mixture is obtained then place in the freezer to set, mixing often until of a grainy consistency.

### Iced coffee

*Ingredients:*

4 espresso coffees  
4 teaspoons of sugar  
12 ice cubes

*Method:*

Crush the ice and add to the pre-sugared coffee. Shake in a shaker until a frothy, creamy mixture is obtained.

RECIPE TIPS: blend on a low blender setting and serve in a flute or glass tumbler.